

# JETE

**WARRANTY CARD and  
USER MANUAL**

**HEADPHONE BLUETOOTH  
JETE-13 PRO**



e-Usermanual

**IMPORTIR**

**PT. DORAN SUKSES INDONESIA**

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

**CUSTOMER SERVICE**

 **081217393609**

 [jete.id](http://jete.id)  [jeteindonesia](https://www.instagram.com/jeteindonesia)

 [jeteindonesia](https://www.facebook.com/jeteindonesia)  [jeteindonesia](https://www.twitter.com/jeteindonesia)

# JETE

## USER MANUAL

HEADPHONE BLUETOOTH  
JETE-13 PRO



Please read the instructions carefully  
before using the product.

## Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.


## Content Package :



JETE-13 PRO



AUX  
Cable

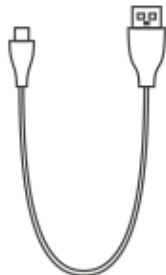


Cable  
Charging



User  
Manual

## Description Structure Product :

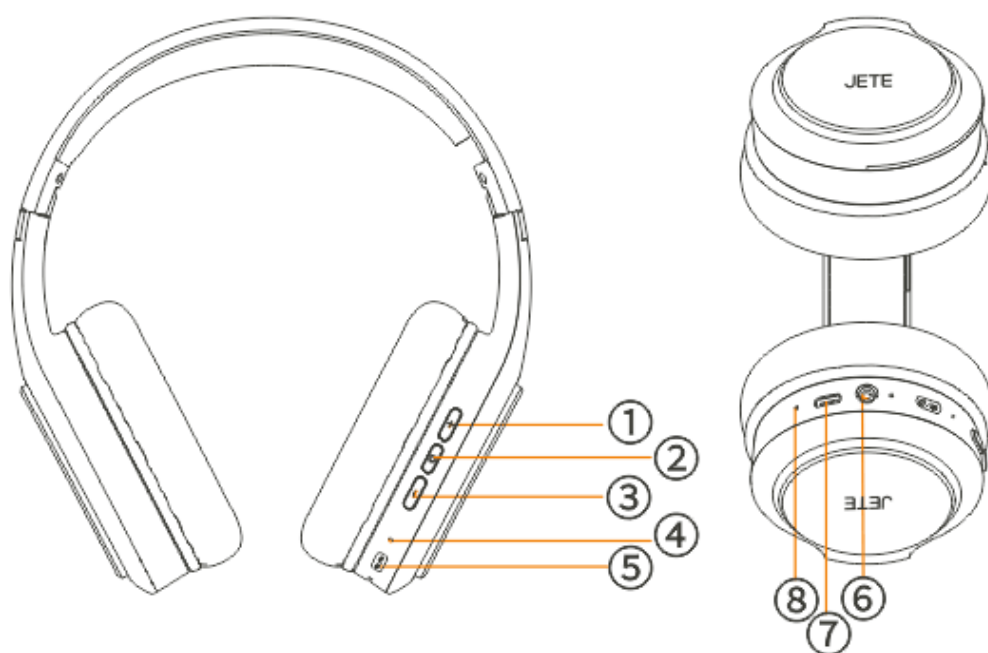

1. Volume +/Next Button
2. Multifunction Button
3. Volume -/Prev Button
4. LED Light

5. Power Button
6. AUX
7. Charging Port
8. Microphone

## How to Use :

### How to Turn On and Turn Off the Headset :

- Turn ON:  
Press and hold for 2 seconds on the power button to turn on the Headphone
- Turn OFF:  
Press and hold for 3 seconds on the power button to turn off the Headphone.

### How to Connect Bluetooth with the Device :

1. Turn on the headphones, the LED light will flash blue and red, indicating that the headphones are ready to pair.
2. Turn on the bluetooth function and search for JETE-13.
3. Click JETE-13 If the LED light is blue, it is a successful connection.

(Note: Headphones have a memory/auto connect function that will automatically connect with the previous device).

### How to Answer Incoming Call :

Press once on the multi-function button to answer a call

**Tips :** Some devices can only answer calls through their own device. please adjust to the instructions of your device.

### How to End a Call :

Press once on the multi-function button to end the call.

### How to Reject a Call :

Press 2 seconds on the multi-function button to reject the call.

### **How to Call the Last Number :**

Press the multi-function button twice

### **How to Play Music :**

1. Press one times on the power button to Play/pause music.
2. Next song : press 2 seconds on the "+" button to play the next song
3. Previous song : Press 2 seconds on the "-" button to play the previous song
4. V+ : Press one times on the "+" button to increase the volume
5. V- : Press one times on the "-" button to decrease the volume .

### **How to Set up RGB Lights :**

Press 2 times the power button to turn RGB on or off

### **Resetting the Benchmarking Record :**

Press and hold the "+" and "-" buttons together for 3 seconds and the red and blue flashing light indicator will appear again, which means that the pairing reset is successful.

### **How to Activate Voice Assistant :**

Press and hold for 2 seconds the multi-function button to activate the voice assistant.

### **How to Change Voice Mode :**

EQ Mode (there are 3 voice mode options)

- Pop Mode
- Bass Mode
- Vocal Mode

Press the power button once to switch modes adjust the EQ according to your preference.

## How to AUX Mode :

1. Connect the 3.5mm AUX to the device and speaker to play songs.
2. In this mode, the function buttons on the headphones do not work.

## How to Charge :

- Use a TYPE-C cable to charge
- The first time the headphones should be on the charger 2 – 3 hours for more optimal function
- When charging the indicator light will be red and blue when finished charging.

## Spesification :

Bluetooth	: V5.1
Transmission Range	: 10m (No Obstacle)
Speaker	: 40 mm
Battery Capacity	: 350mAh
RGB ON	: 14H (70% Volume)
RGB OFF	: 22H (70% Volume)
Impedansi	: $32\Omega \pm 15\%$
Speaker Frequency	: 20Hz-20KHz
Charging Time	: 2-3 Hour
Voltase Input	: DC 5V/1A
Weight	: 210 g

## Tips :

- Regular use of headphones is the easiest maintenance that can be done
- It is recommended to listen to music at a moderate volume, to maintain hearing health

## Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

## How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
  - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
  - The product must still be within the specified warranty period.
  - Warranty card that has been filled out.
  - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
  - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609



## Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
  - Disfunction.
  - Audio not detected.
  - Indicator off.
  - Battery damage.
6. This warranty DOES NOT APPLY if:
  - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
  - MODIFIED YOURSELF, SOAKED IN WATER.
  - Supporting accessories such as: cables, adapters, etc.
  - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
  - The product has been repaired by a third party.
  - The data is not filled in completely by the seller and buyer.
  - Damage caused by user error.
  - The product warranty period has expired.

**2 YEARS  
WARRANTY**

NEW REPLACEMENT  
FOR ANY FAULTS \*T&C



Contact Us

**JETE WARRANTY POINTS**

