

# JETE

**WARRANTY CARD and  
USER MANUAL**

**HEADPHONE SX1**



e-Usermanual

**IMPORTIR**

**PT. DORAN SUKSES INDONESIA**

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

**CUSTOMER SERVICE**

 **081217393609**

 
 [jete.id](http://jete.id)  [jeteindonesia](https://www.instagram.com/jeteindonesia)

 [jeteindonesia](https://www.facebook.com/jeteindonesia)  [jeteindonesia](https://www.twitter.com/jeteindonesia)

# JETE

## USER MANUAL

### HEADPHONE SX1

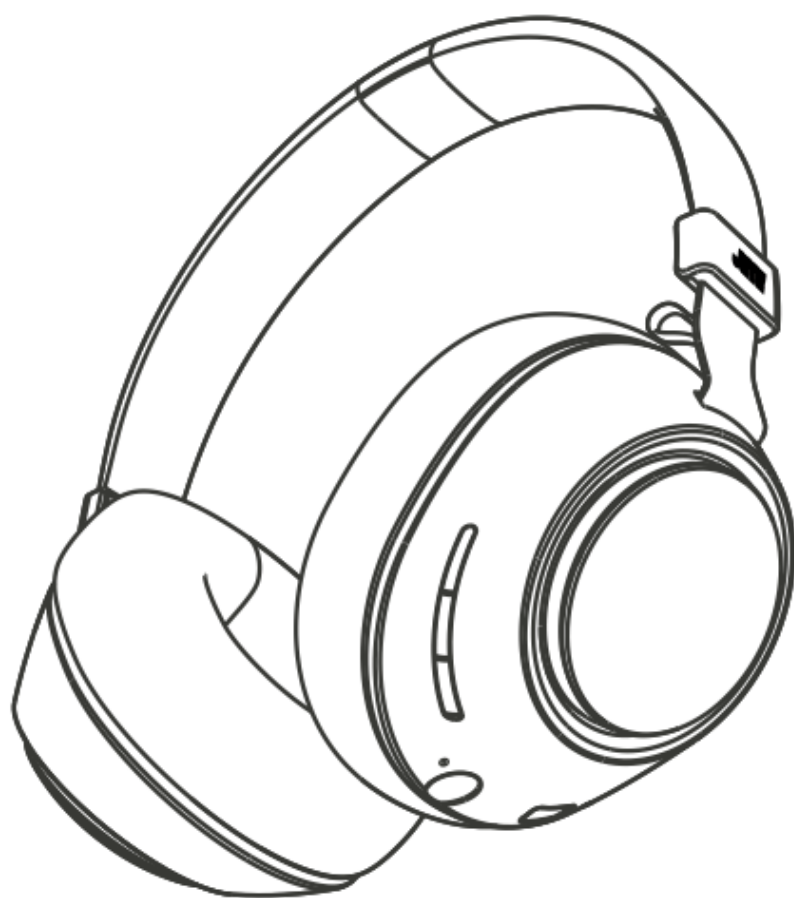


Please read the instructions carefully  
before using the product.

## Product Introduction :

 Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.


## Content Package :

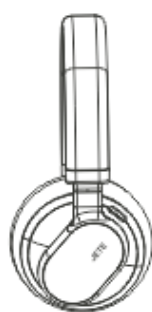

SX1



 AUX Cable

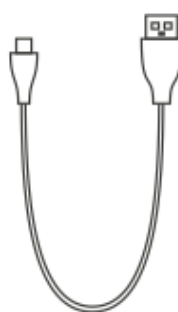


Charging  
Cable



User  
Manual

## Description Structure Product :

 1. Touch Area
2. Power Button On/Off
3. LED Indicator
4. Microphone
5. Port USB-C

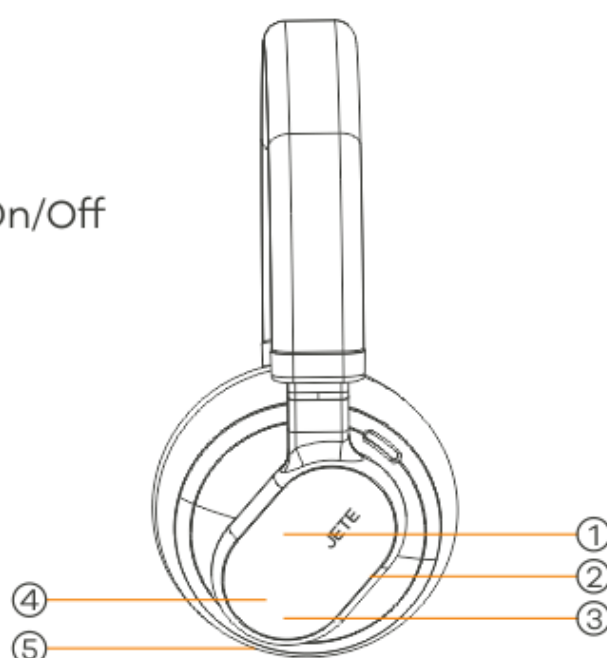

### Tips:

- Regular use of headphones is the easiest maintenance that can be done
- It is recommended to listen to music at a moderate volume, to maintain hearing health

## How to Use :

### How to Turn On the Headphone :

Press and hold for 3 seconds on the Power button to turn on the Headphone, The headphones will switch on and enter pairing mode automatically.

### How to Turn Off the Headphone :

Press and hold for 3 seconds on the power button to turn off, LED Indicator will off.

### How to Connect Devices with Bluetooth :

1. Press the multifunction button for 3 seconds, a sound will appear and the LED will flash white and Orange, indicating the Headphones are in pairing mode.
2. Activate the bluetooth menu on your smartphone, and search for "JETE SX1" then click "connect" the indicator will be white and a sound will be heard indicating the headphones have successfully connected with your device.

### Note:

- The device has a memory function that will automatically connect with the previous device when it is powered on.
- The connection will be lost when you move out of the speaker's range (18m) and will automatically reconnect when you are within range within 3 minutes.

### Power Button Function :

- Play/Pause: Press 1 x
- Answer Incoming Call/End Call: Press 1 x
- Reject A Call: Press a few seconds

### Touchpad :

- Slide from "-" to "+" for to decrease the volume .
- Slide from "+" to "-" for to increase the volume.

- Slide from " << " to " >> " for The next songs
- Slide from " >> " to " << " for The Previous songs

Note : Touchpad function will work best for customised music player apps

### **How to AUX Cable Mode :**

Once the headphones are on, insert the AUX cable into the headphones, the headphones will automatically switch off and enter aux mode.

- Play/Pause mode and hang up: Touch the touch area 1 time
- Reject incoming call : touch the touch area for 2 seconds
- Play Music:
  1. touch the touch area 2 times to go to the next song
  2. touch the touch area 3 times to go to the previous song

### **How to Charge :**

- Plug in the charging cable provided in the box
- Indicator will be red when charging
- The indicator will turn white when the charge is full
- Please use the original inbuilt cable for the safety of your headphones

### **LED Status :**

- Charging Status  
Is orange while charging is in progress and will turn white when charging is full
- Power off status  
Indicator and LED will turn off
- Pairing Status:  
LEDs flash white and orange
- Standby status  
LEDs will be white

- Pairing successful  
Indicator is white

**Note:**

If there is no connection after the device enters the pairing mode, please switch off the device to save battery power.

**Specification :**

Model	: Sx1
Bluetooth	: V5.3
Wireless Range	: < 10 m
Speaker	: 40mm
Battery	: 500mAh
Playtime	: 20 Hour
Speaker	: 40 mm
Sensitivity	: 100±3 dB/mW (S.P.L at 1KHz)
Impedance	: 32±15%
Frequency Response	: -20Hz - 20.000Hz
Rated Power	: 15 mW
Cable Length	: 45±5cm

## Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

## How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
  - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
  - The product must still be within the specified warranty period.
  - Warranty card that has been filled out.
  - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
  - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609



## Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
  - Disfunction.
  - Audio not detected.
  - Indicator off.
  - Battery damage.
6. This warranty DOES NOT APPLY if:
  - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
  - MODIFIED YOURSELF, SOAKED IN WATER.
  - Supporting accessories such as: cables, adapters, etc.
  - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
  - The product has been repaired by a third party.
  - The data is not filled in completely by the seller and buyer.
  - Damage caused by user error.
  - The product warranty period has expired.

**2 YEARS  
WARRANTY**

**NEW REPLACEMENT  
FOR ANY FAULTS \*T&C**



Contact Us

**JETE WARRANTY POINTS**

