

JETE

WARRANTY CARD and USER MANUAL

TWS T3



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE

 081217393609


 jete.id  jeteindonesia

 jeteindonesia  jeteindonesia

JETE

USER MANUAL

TWS T3

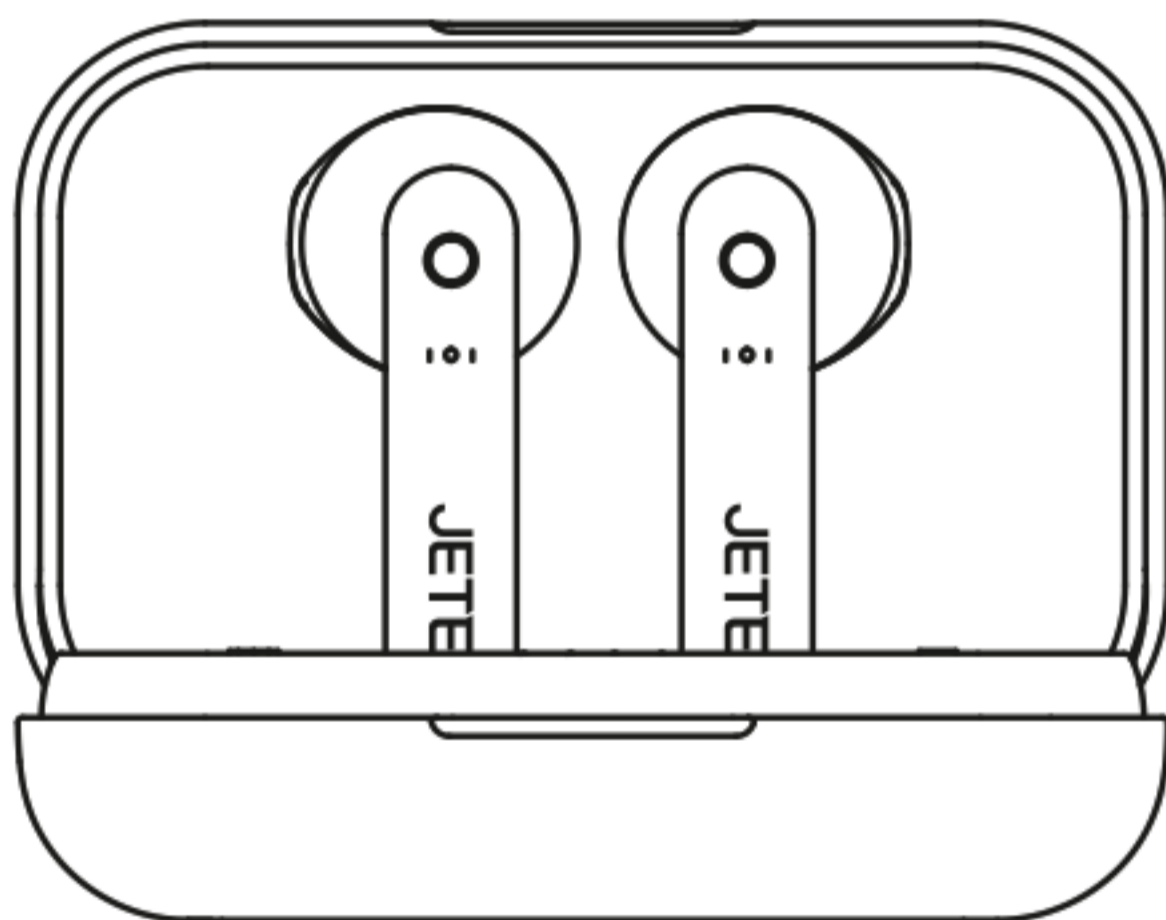


Please read the process carefully
before using the product


Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, please read the instructions carefully before using this product.

Package Content :

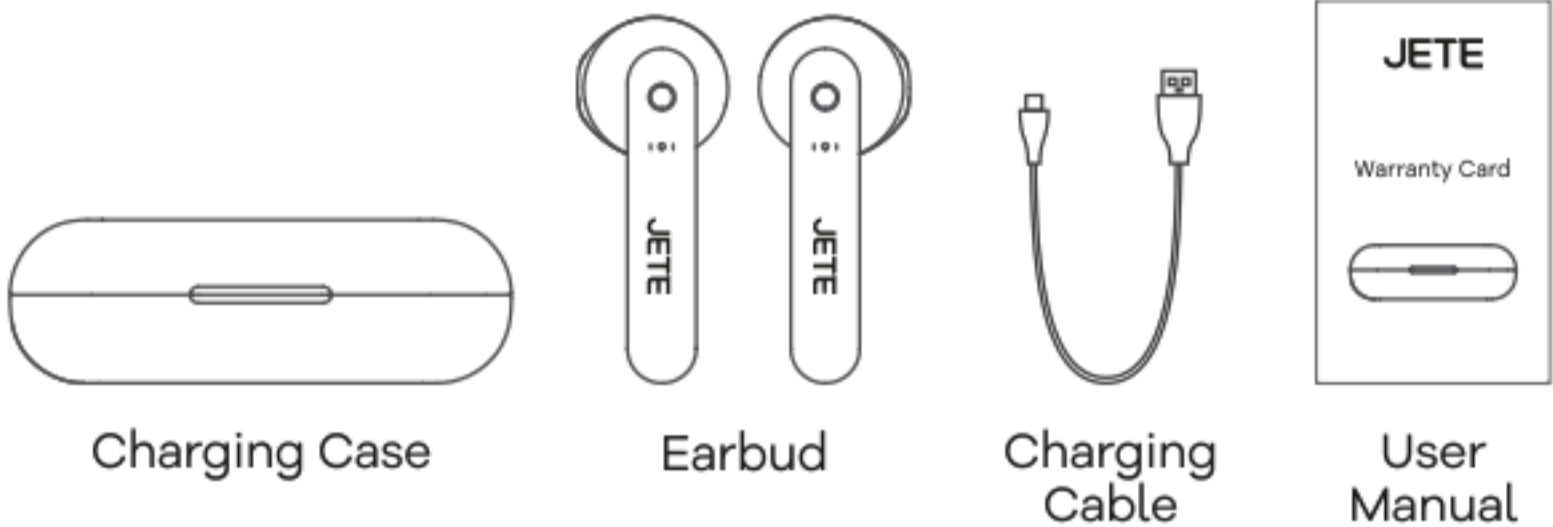

Description Structure Product :

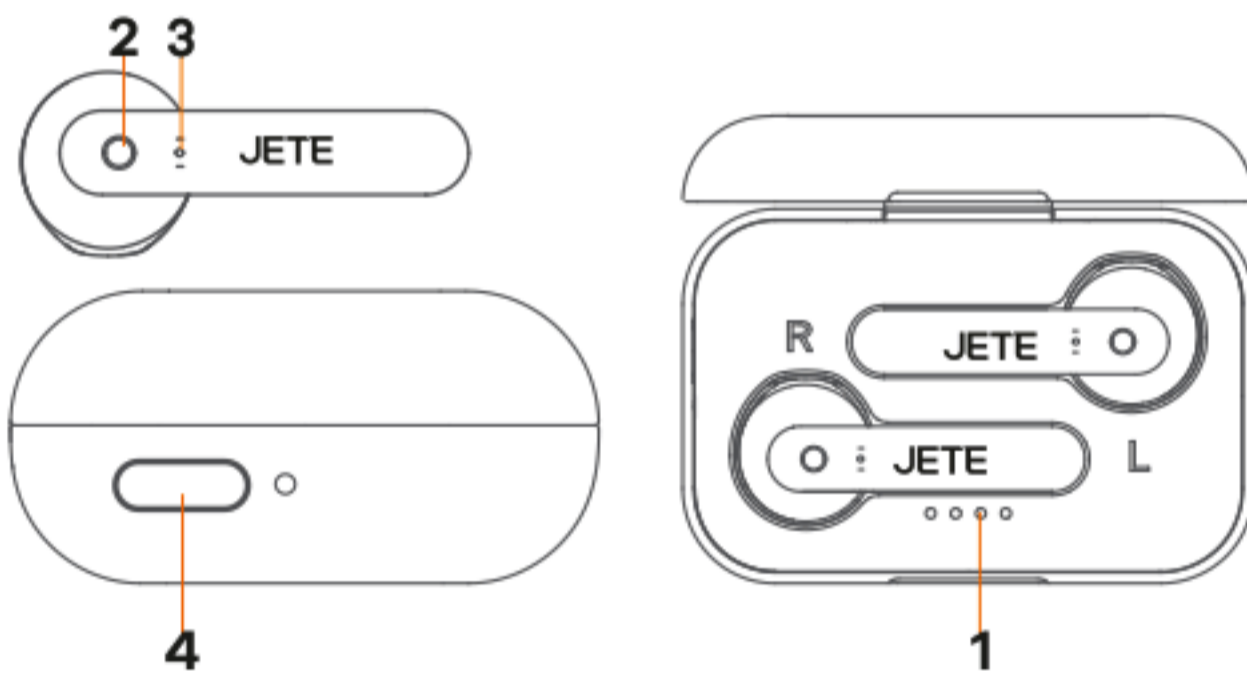

1. LED Indicator
2. MFB (Multifunction Button)
3. Earbud Indicator
4. Charging Port

Tips :

Gently insert the earbuds into your ears and adjust the position to fit your ears.

Attention :

Please open the plastic seals on both ends of the earbuds and do not forget the earbuds in the charger into the charging case for approximately 10 minutes for optimal use.



How to Use :

How to Turn On the Earbud :

- Take out the earbuds from the charging box to power on.
- When the earbuds are outside the charging box, touch for 5 seconds on the left or right earbud then the earbud indicator light will flash orange and white.

How to Turn Off the Earbud :

- Put the earbuds into the charging case and rotate the character to prevent the earbuds from falling out.
- When the earbuds are outside the charging case, touch for 5 seconds on the left or right earbud.

How to Connect the Device with Earbud :

- Take the earbuds out of the charging case.
- The indicator will flash white on one of the earbuds.
- Activate bluetooth on the device.
- Then activate search and select "JETE-T3".
- Headphones are ready to use.
- If within 180 seconds of turning on your earbuds do not pair with Bluetooth on your device. The earbuds must be restarted.

Notes :

- The earbuds will automatically connect to the previous device when switched on.
- The connection will be lost when you go out of range and will automatically reconnect when you return to range within 3 minutes.

How to Answer and End a Incoming Call :

Press 1 times at the earbud on the right/left to answer or end the call

How to Reject a Call :

Press the 2 seconds at the earbud on the right/left to reject the call.

How to Active Fitur Voice Assistance :

Press 2 times at the earbud on the right/left for active voice assistance.

How to Play Music :

- Play/pause : Press 1 times at the earbud on the right/left to Play/pause music.
- Next song : Press 2 seconds at the earbud on the right for play music next.
- Previous song : Press 2 seconds at the earbud on the left for play music previous.

How to Use Mono Mode :

- Take out one of the earbuds as a separate bluetooth earbud.
(Note: Mono Mode only requires one earbud).
- Remove the earbuds from the charging box, then the earbuds will automatically turn on and connect to the previous device.

How to Change Mode :

- Press 2 seconds for the earbuds on the left/right for change mode.

How to Charge :

- **Charging Case** : Use a USB Type-C cable to a computer or a charger adapter. While charging the indicator will flash and stop flashing when charging is complete. Accurate charging time is 2 hours.
- **Earbud** : Put the earbuds into the charging box to charge the earbuds. While the charging indicator on both earbuds is orange and the indicator will turn off when charging is complete.

How to restore to factory settings:

Press the right/left earbud 5 times to reset the earbud.

Spesification :

Chip	: JL 6963
Bluetooth	: V5.0
Earbud Batter	: 30mAh*2 (completely filled inside 1.5jam)
Battery Case	: 300mAh
Play Time	: 2.5 Hour (60% Volume)
Talk Time	: 2 Hour
Charging Time	: 2 Hour
Case Dimension	: 23*45*63mm
Earbud Dimension	: 18*17*40mm*2
Weight	: 3.7g*2 (Earbud) 38.3g (Charging case)
Wireless Range	: 10M (Without Obstacle)
Speaker	: 10mm*2
Speaker Frequency	: 20Hz~20KHz
Input voltase	: DC 5V/1A

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is **MANDATORY** to show the completeness of the warranty:
 - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
 - The product must still be within the specified warranty period.
 - Warranty card that has been filled out.
 - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. **WARRANTY DOES NOT APPLY** if **USER DAMAGE** is found, namely:
 - **BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.**
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
 - Disfunction.
 - Audio not detected.
 - Indicator off.
 - Battery damage.
6. This warranty DOES NOT APPLY if:
 - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
 - MODIFIED YOURSELF, SOAKED IN WATER.
 - Supporting accessories such as: cables, adapters, etc.
 - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
 - The product has been repaired by a third party.
 - The data is not filled in completely by the seller and buyer.
 - Damage caused by user error.
 - The product warranty period has expired.

**2 YEARS
WARRANTY**

NEW REPLACEMENT
FOR ANY FAULTS *T&C



Contact Us

JETE WARRANTY POINTS

