

# JETE

**WARRANTY CARD and  
USER MANUAL**

**KEY FINDER F1**



e-Usermanual

**IMPORTIR**

**PT. DORAN SUKSES INDONESIA**

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

**CUSTOMER SERVICE**

 **081217393609**

 
 [jete.id](http://jete.id)  [jeteindonesia](https://www.instagram.com/jeteindonesia)

 [jeteindonesia](https://www.facebook.com/jeteindonesia)  [jeteindonesia](https://www.twitter.com/jeteindonesia)

# JETE

## USER MANUAL

### KEY FINDER F1

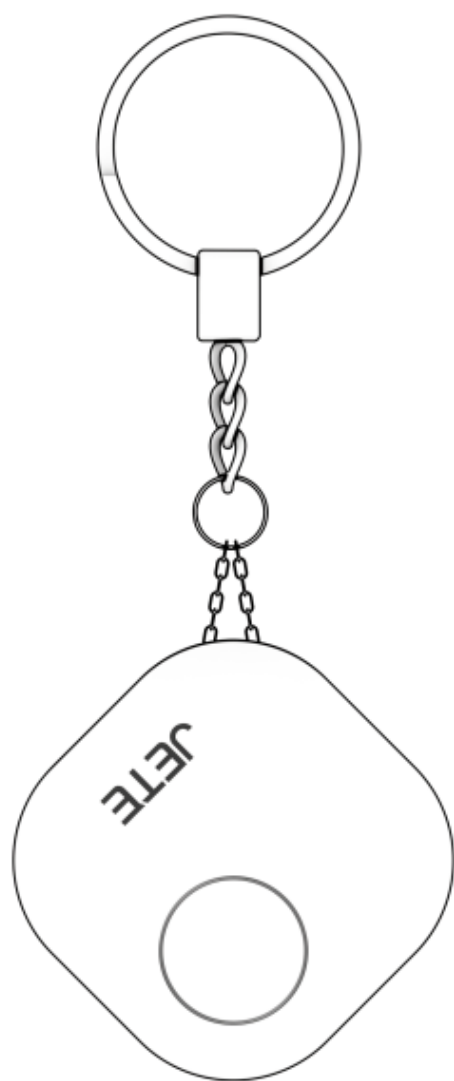

Please read the instructions carefully  
before using the product.


## Product Introduction :

 Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

## Content Package :



F1

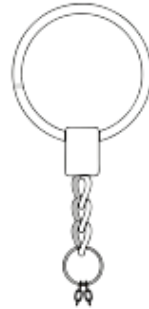

Hanger  
Chain



User  
Manual




Double Tape



Battery

## Description Structure Product :

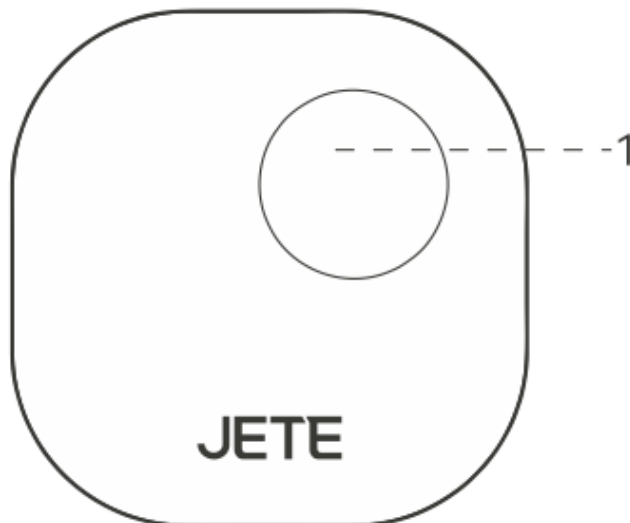 

1. On / Off Power Button

## 1. How to Operating Finder :

### A. How to Turn ON Finder :

Press 5 seconds power button for turn on, the Indicator will be blinking red with the voice

### B. How to Turn OFF Finder :

Press 5 seconds power button for turn off, the Indicator will be blinking red with the voice

### C. How to Know the Status of Finder :

Press the button twice to check the status of the finder.

 
 
 
 
 
 
 
 
1. If there is a "Beep" sound once accompanied by an "orange" indicator, the finder is connected.
2. If there is a sound but not accompanied by an "orange" colored indicator, it means that the finder is not connected.

### D. How to Factory Reset :

1. Press 2 times quickly until the sound is heard.
2. After the sound is heard immediately press 1 time and hold for 5 seconds.



### E. How to Connect Finder with iPhone :

1. Turn on the Finder
2. Open the "Find My" application
3. Select "ITEM" Menu
4. Click "Add Item"
5. Select "Other Supported Item"
6. Search for JETE-F1, then Click "Connect"
7. Name the device and click Continue
8. Select Emoticon and click Continue
9. After that, information will appear, select "Agree" then click "Finish".
10. Make sure the pairing is successful, so that the product works perfectly.

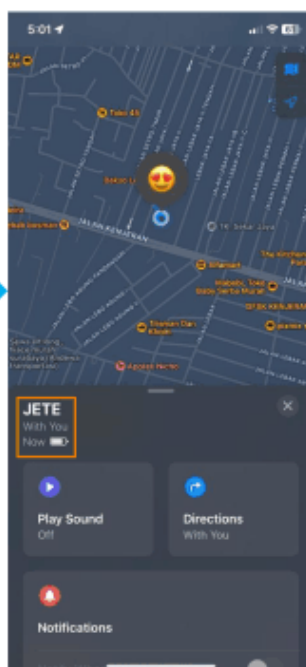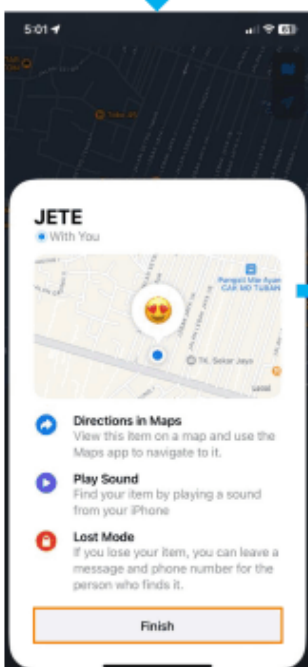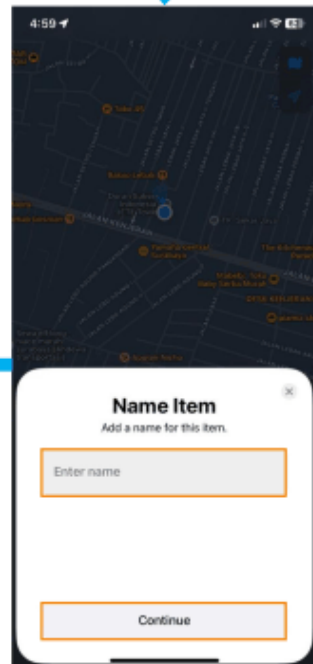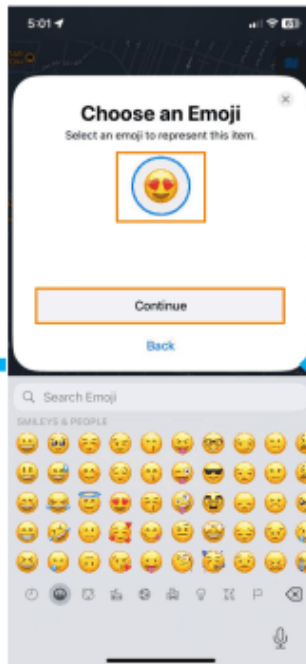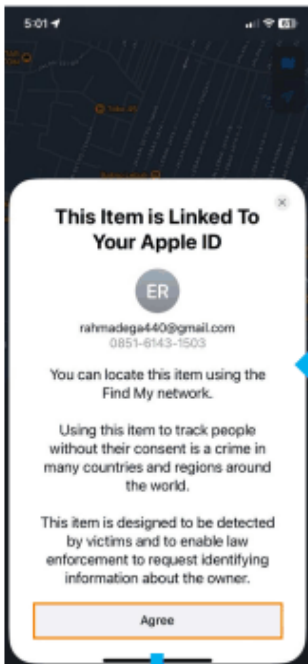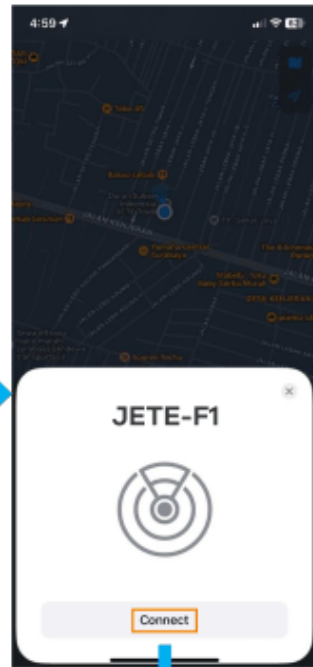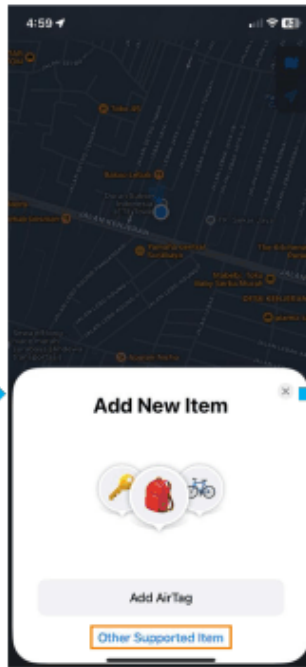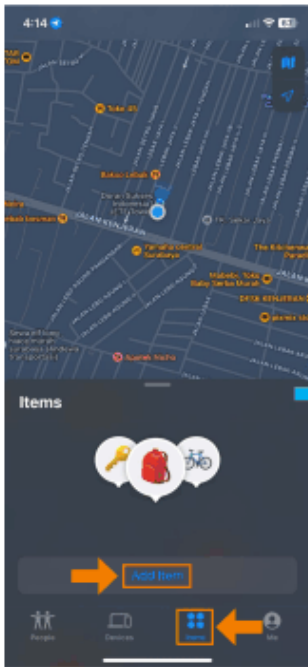



## F. Ring The Finder :

  1. Open "Find My"
2. Tap menu "ITEM"
3. Choose Device
4. Click "Play Sound"

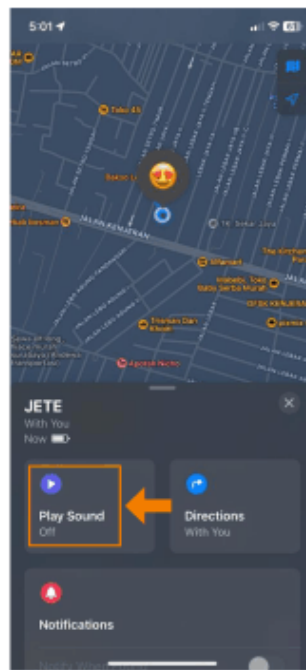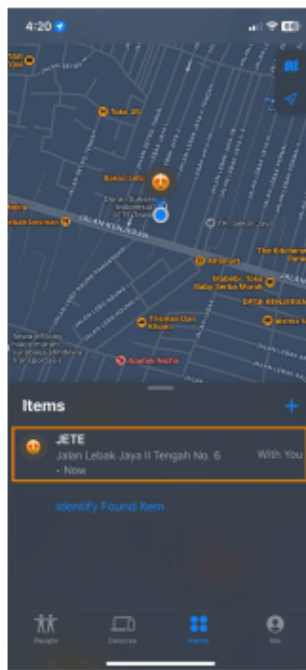

## G. Disconnect device :

  1. Open "Find My"
2. Tap menu "ITEM"
3. Choose Device
4. Scroll down, and choose "Remove Item"

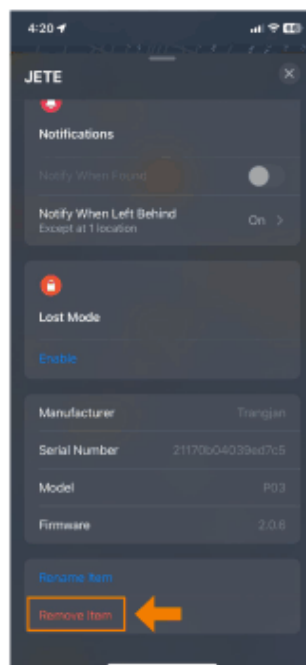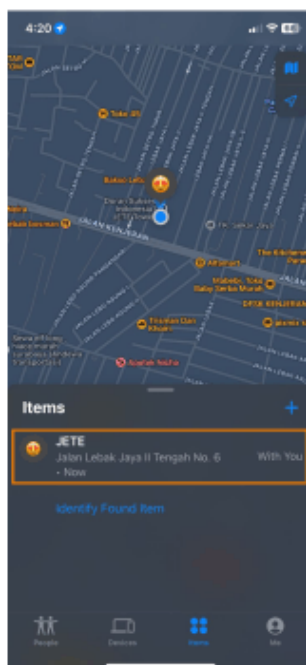

## Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.



## How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
  - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
  - The product must still be within the specified warranty period.
  - Warranty card that has been filled out.
  - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
  - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609



## Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
  - Disfunction.
  - Audio not detected.
  - Indicator off.
  - Battery damage.
6. This warranty DOES NOT APPLY if:
  - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
  - MODIFIED YOURSELF, SOAKED IN WATER.
  - Supporting accessories such as: cables, adapters, etc.
  - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
  - The product has been repaired by a third party.
  - The data is not filled in completely by the seller and buyer.
  - Damage caused by user error.
  - The product warranty period has expired.

**2 YEARS  
WARRANTY**

NEW REPLACEMENT  
FOR ANY FAULTS \*T&C



Contact Us

## JETE WARRANTY POINTS

