

JETE

**WARRANTY CARD and
USER MANUAL**

**HEADPHONE BLUETOOTH
JETE-11**



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE

 **081217393609**

 jete.id  [jeteindonesia](https://www.instagram.com/jeteindonesia)

 [jeteindonesia](https://www.facebook.com/jeteindonesia)  [jeteindonesia](https://www.twitter.com/jeteindonesia)

JETE

USER MANUAL

HEADPHONE BLUETOOTH JETE-11



Please read the instructions carefully
before using the product.

Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

Content Package :




JETE-11



Cable AUX




Cable
Charging

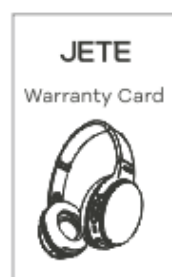

User Manual

Description Structure Product :

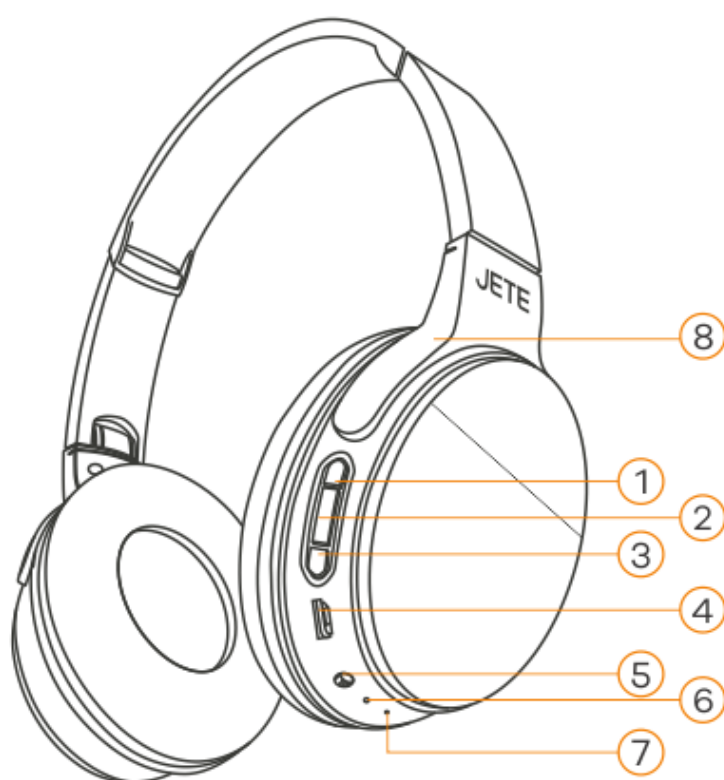

- | | |
|--------------------------------|------------------|
| 1. Volume +/Next | 5. AUX Port |
| 2. Multi-Function Button (MFB) | 6. LED Indicator |
| 3. Volume -/Prev | 7. Microphone |
| 4. Charging Port | 8. Memory Slot |

Tips:

- Regular use of headphones is the easiest maintenance that can be done
- It is recommended to listen to music at a moderate volume, to maintain hearing health

How to Use :

Turning Headphones On and Off :

- Press and hold the MFB button for 2 seconds to turn on the headphones.
- Press and hold the MFB button for 2 seconds to turn off the headphones.

Connect wirelessly with devices :

1. Turn on "JETE-11" and wait until the Wireless LED flashes red and blue, indicating the headphones are ready to pair.
2. Activate the Bluetooth function on the smartphone and search for "JETE-11".
3. Click "JETE-11" the LED light will be blue accompanied by a sound indicating successful connection.

Notes :

- The headphones will automatically connect to the previous device when turned on.
- The connection will be lost when you leave the range of the headphones (10m) and will automatically reconnect when you are within range within 3 minutes.

Answer Incoming Call

- Press the Multifunction button once to answer the call.

Tips : Some types of mobile phones can only answer calls through their own devices. adjust according to the instructions on the mobile phone

End Call :

Press once on the MFB button to end the call.

Reject call :

Press for two seconds on the MFB button when there is an incoming call.

Redial last number:

Press the MFB button twice to call the last number dialed.

Play Music

1. Press once the power button to play/pause songs.
2. Press for 2 seconds on the V+ button to increase the volume.
3. Press for 2 seconds on the V button to reduce the volume.
4. Press the " ►► " button once to play the next song.
5. Press the " ◀◀ " button once to play the previous song.

How to change modes :

Mode radio :

- Press 2 times the (V+) button.
- Press the MFB button once to search for radio channels.
- Press the MFB button again to complete the search.
- Press the / button ►► ◀◀ once to select a saved channel.
- The volume function is the same as the music function.

Mode jack AUX:

- Plug the 3.5mm AUX Jack cable into the bottom of the left headphone, and plug the other end into the jack hole on your device.
- Then play music for your device.

Mode memory card :

Insert a memory card filled with songs in MP3 format, the headphones will automatically recognize the files in memory.

Spesifikasi :

Model	: JETE-11
Talk Time	: 6 Hour
Play Time	: 8-10 Hour
Battery	: 250mAh
Frequency Range	: 20Hz-20KHz
Standby Time	: 130 Hour
Microphone Sensitivity	: $-36\pm 3\text{dB}$
Bluetooth	: V5.3

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
 - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
 - The product must still be within the specified warranty period.
 - Warranty card that has been filled out.
 - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
 - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
 - Disfunction.
 - Audio not detected.
 - Indicator off.
 - Battery damage.
6. This warranty DOES NOT APPLY if:
 - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
 - MODIFIED YOURSELF, SOAKED IN WATER.
 - Supporting accessories such as: cables, adapters, etc.
 - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
 - The product has been repaired by a third party.
 - The data is not filled in completely by the seller and buyer.
 - Damage caused by user error.
 - The product warranty period has expired.

**2 YEARS
WARRANTY**

NEW REPLACEMENT
FOR ANY FAULTS *T&C



Contact Us

JETE WARRANTY POINTS

