

JETE

**WARRANTY CARD and
USER MANUAL**

POWERBANK PHANTOM



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE

 081217393609

 
 jete.id  jeteindonesia

 jeteindonesia  jeteindonesia

JETE

USER MANUAL

POWERBANK PHANTOM

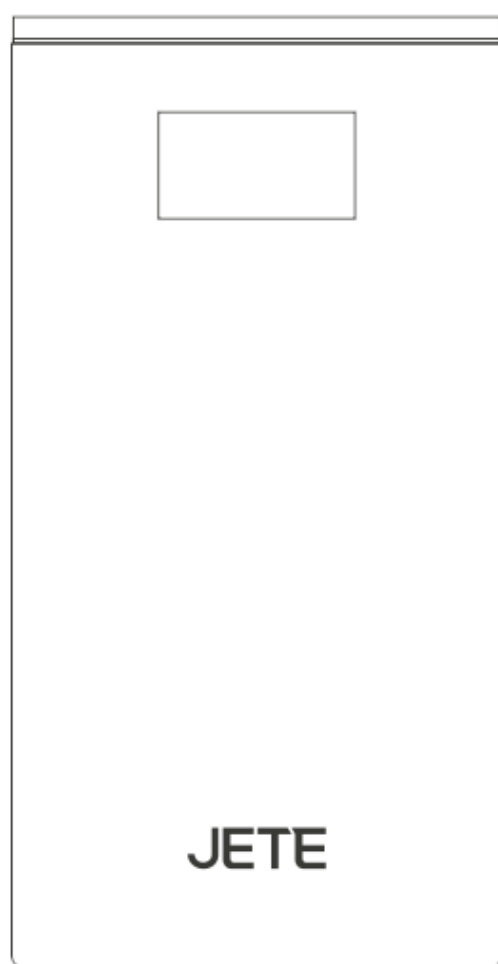

IMKG.2107.09.2020

Please read the process carefully
before using the product

 
Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, please read the instructions carefully before using this product.

Package Content :




Phantom

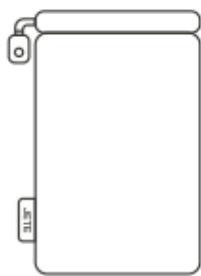

Pouch




 Cable
Charging

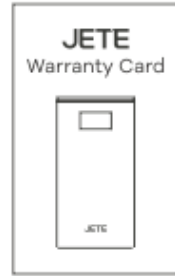

User Manual

 Description Structure Product :

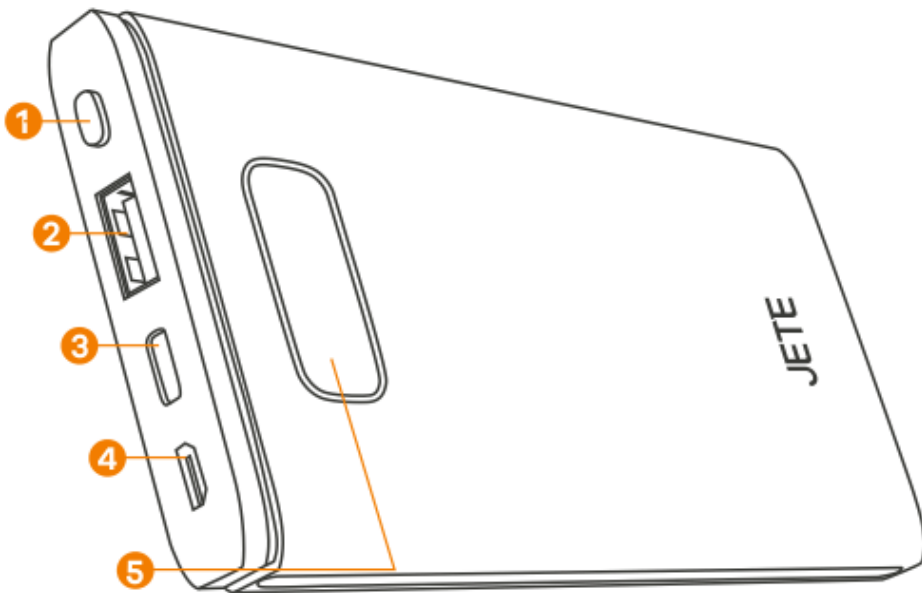


1. Power Button
2. Port USB-A
3. Port Type-C

4. Port Micro
5. LED Indicator

Powerbank Usage :

 This product is indicated for digital devices with input

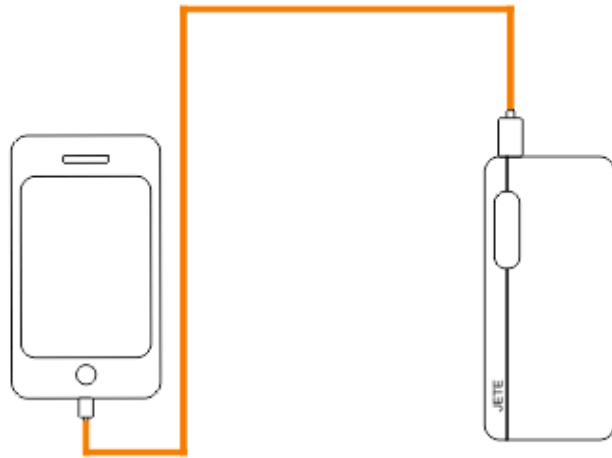

- Rechargeable portable powerbank according to powerbank specifications
- Connect with mobile phones and various types of rechargeable devices.
- Has AUTO DETECT current technology
- LED Indicator, to monitor the available capacity level of the power bank

Notes :

Charging time to full powerbank 3.7 hours (Normal) or 2.1 hours (Fast Charging)

Tips :

- Daily use can make the power bank in the best status.
- If not used for a long time, please keep it at 50% capacity.
- If not used for a long time, please remember to charge every 3 months.

Spesifikasi :

Model	: PHANTOM
Capacity	: 13.000mAh
Material	: ABS + PC
Micro Input	: DC 5V/2.0A 9V/1.5A
USB-C Input	: DC 5V/3A 9V/2.22A 12V/1.67A (20W PD)
USB-C Output	: DC 5V/3A 9V/2.22A 12V/1.67A (20W PD)
USB-A Output	: DC 5V/3A 9V/2A 12V/1.5A 5V/4.5A 4.5V/5A (22.5W QC)
USB Output	: 2 Port
Weight	: 292g

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is **MANDATORY** to show the completeness of the warranty:
 - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
 - The product must still be within the specified warranty period.
 - Warranty card that has been filled out.
 - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. **WARRANTY DOES NOT APPLY** if **USER DAMAGE** is found, namely:
 - **BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.**
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
 - Disfunction.
 - Audio not detected.
 - Indicator off.
 - Battery damage.
6. This warranty DOES NOT APPLY if:
 - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
 - MODIFIED YOURSELF, SOAKED IN WATER.
 - Supporting accessories such as: cables, adapters, etc.
 - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
 - The product has been repaired by a third party.
 - The data is not filled in completely by the seller and buyer.
 - Damage caused by user error.
 - The product warranty period has expired.

**2 YEARS
WARRANTY**

NEW REPLACEMENT
FOR ANY FAULTS *T&C



Contact Us

JETE WARRANTY POINTS

