

# JETE

**WARRANTY CARD and  
USER MANUAL**

**HEADPHONE SX2**



e-Usermanual

**IMPORTIR**

**PT. DORAN SUKSES INDONESIA**

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

**CUSTOMER SERVICE**

 081217393609

 jete.id  jeteindonesia

 jeteindonesia  jeteindonesia

# JETE

## USER MANUAL

### HEADPHONE SX2



Please read the instructions carefully  
before using the product.

## Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.


## Content Package :



SX2



AUX Cable

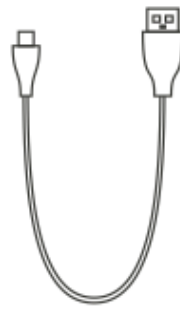


Charging Cable



User Manual

## Description Structure Product :

1. MFB Button
2. Volume +/Next
3. Volume -/Previous
4. Mode Button
5. Indicator LED
6. Microphone
7. Charging Port
8. AUX Port

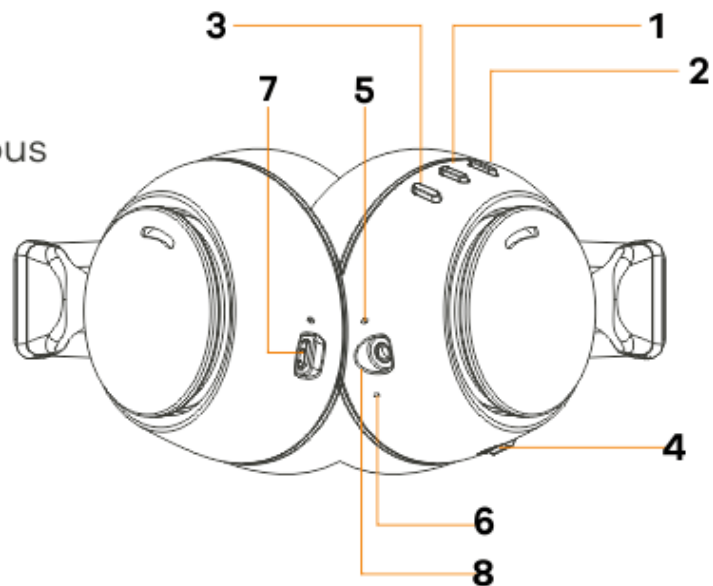

### Tips:

- Regular use of headphones is the easiest maintenance that can be done
- It is recommended to listen to music at a moderate volume, to maintain hearing health

## How to Use :

### How to Turn On the Headphone :

Press and hold for 2 seconds on the Power button to turn on the Headphone, and the LED will flash red and blue. The headphones will switch on and enter pairing mode automatically.

### How to Turn Off the Headphone :

Press and hold for 3 seconds on the power button to turn off, and the LED will flash red.

### How to Connect Devices with Bluetooth :

1. Press the multifunction button for 2 seconds, a sound will appear and the LED will flash Red and blue, indicating the Headphones are in pairing mode.
2. Activate the bluetooth menu on your smartphone, and search for "JETE SX2" then click "connect" the indicator will be white and a sound will be heard indicating the headphones have successfully connected with your device.

### Note:

- The device has a memory function that will automatically connect with the previous device when it is powered on.
- The connection will be lost when you move out of the speaker's range (10m) and will automatically reconnect when you are within range within 3 minutes.

### How to Answer an Incoming Call :

- Press the Multifunction button once to answer the call end the call

Tips : Some types of mobile phones can only answer calls through their own devices. adjust according to the instructions on the mobile phone

### **How to End a Call :**

Press for Multifunction button once to end the call.

### **How to Reject a Call :**

Press for 2 seconds the Multifunction button to reject the call.

### **How to Call Last Call :**

Double press on the Multifunction button to call the last call

### **How to Play Music :**

1. Press once on the Multifunction button to start/pause.
2. press a 2 seconds on the "V+" button to play the next song (next)
3. Press a 2 seconds on the "V-" button to play the previous song (prev)
4. Press once on the "V+" button to increase the volume
5. Press once on the "V-" button to decrease the volume.

### **Activate Noise Cancelling (ANC) Mode :**

- Slide Mode button at beside headphone until the sound of " ANC On "
- ANC Mode Cannot function When using the aux cable

### **AUX Mode :**

1. Connect the AUX Cable to the device and speaker to play songs
2. In this mode, the function buttons on the headphones do not work

### **How to Charge :**

- Use the Type-C cable to charge
- The first time the headphones should be charged for approximately 1.5-2 hours for optimal function.

- When charging, the indicator light will be red and turn off when the charge is full

### Spesification :

Bluetooth	: V5.3
Wireless Range	: 10 m
Speaker	: 40 mm
Battery	: 500mAh
Playtime	: 34 Hour (BT)   22H (ANC+BT) (50% Volume)
Talktime	: 34 Hour (BT)   22H (ANC+BT) (50% Volume)
Sensitivity	: 100±3 dB/mW (S.P.L at 1KHz)
Impedance	: 32±15%
Speaker Frequency	: 20Hz-20,000Hz
Charging Time	: 1.5-2 Hour
Input Voltage	: DC 5V/300mA
Product size	: 170 x 190 x 82 mm
weight	: 253 g

## Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

## How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
  - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
  - The product must still be within the specified warranty period.
  - Warranty card that has been filled out.
  - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
  - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609



## Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
  - Disfunction.
  - Audio not detected.
  - Indicator off.
  - Battery damage.
6. This warranty DOES NOT APPLY if:
  - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
  - MODIFIED YOURSELF, SOAKED IN WATER.
  - Supporting accessories such as: cables, adapters, etc.
  - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
  - The product has been repaired by a third party.
  - The data is not filled in completely by the seller and buyer.
  - Damage caused by user error.
  - The product warranty period has expired.

**2 YEARS  
WARRANTY**

**NEW REPLACEMENT  
FOR ANY FAULTS \*T&C**



Contact Us

**JETE WARRANTY POINTS**

