JETE

WARRANTY CARD and **USER MANUAL**

POWERBANK A12



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE












JETE

USER MANUAL

POWERBANK A12

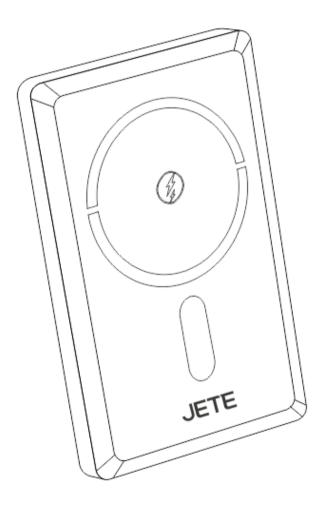


IMKG.2107.09.2020

Please read the instructions carefully before using the product.


Product Introduction:

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

Content Package:

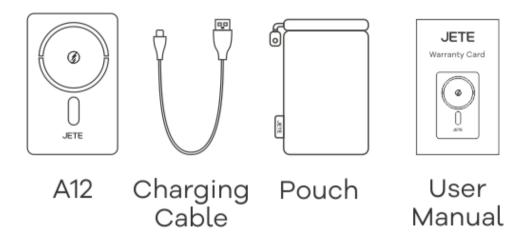


Description Structure Product:

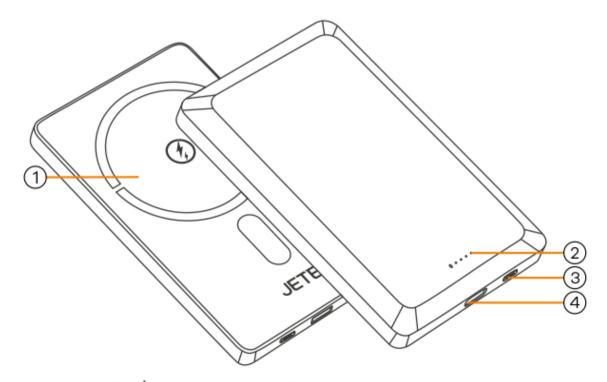

- 1. Wireless Area
- 3. Power Button
- 2. Light Indicator 4. Port Type-C

How to Use:

This product is indicated for digital devices with input

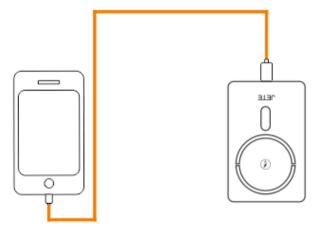

- Rechargeable portable powerbank according to powerbank specifications
- Connect with mobile phones and various types of rechargeable devices.
- Has AUTO DETECT current technology
- LED Indicator, to monitor the available capacity level of the power bank

Notes:

Charging time to full powerbank 1.85-2.5 hours (Fast Charging)

Tips:

- Daily use can make the power bank in the best status.
- If not used for a long time, please keep it at 50% capacity.
- If not used for a long time, please remember to charge every 3 months.

Spesification:

Model : A12

Capacity: 10.000mAh | 37W

Material : Aluminum alloy, ABS fireproof USB-C Input : DC 5V/3.0A | 9V/2.0A | 12V/1.67A

(20W PD)

Wireless Output: 5W | 7.5W | 10W | 15W

USB-C Output : DC 5V/3.0A | 9V/2.22A | 12V/1.67A

(20W PD MAX)

USB-A Output : DC 5V/3.0A | 9V/2.0A | 12V/1.5A |

5V/4.5A | 4.5V/5A (22.5W PD MAX)

Weight: 185.4g

Maintenance:

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product:

- 1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
- 2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
- 3. All expedition shipping costs / product postage are borne by the buyer.
- 4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
- A purchase receipt that clearly states the name of the outlet and the date of the transaction.
- The product must still be within the specified warranty period.
- Warranty card that has been filled out.
- Box/Packing Product.
- 5. Please inform the constraints / product damage that occurs to our staff.
- 6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
- BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
- 7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty:

- This warranty is valid for 2 years for original JETE products.
- 2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
- 3. During the warranty period, the user is exempt from any replacement costs that may occur.
- 4. The user must show the warranty card and purchase receipt when applying for a warranty.
- 5. The warranty applies to functional damage:
- Disfunction.
- Audio not detected.
- Indicator off.
- Battery damage.
- 6. This warranty DOES NOT APPLY if:
- PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
- MODIFIED YOURSELF, SOAKED IN WATER.
- Supporting accessories such as: cables, adapters, etc.
- Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
- The product has been repaired by a third party.
- The data is not filled in completely by the seller and buyer.
- Damage caused by user error.
- The product warranty period has expired.





Contact Us

JETE WARRANTY POINTS

