

JETE

**WARRANTY CARD and
USER MANUAL**

SMART LAMP BL1 BT



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE

 **081217393609**

 jete.id  [jeteindonesia](https://www.instagram.com/jeteindonesia)

 [jeteindonesia](https://www.facebook.com/jeteindonesia)  [jeteindonesia](https://www.twitter.com/jeteindonesia)

JETE

USER MANUAL

SMART LAMP BL1 BT



Please read the instructions carefully
before using the product

Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

Content Package :




BL1



User Manual

 Description Structure Product :

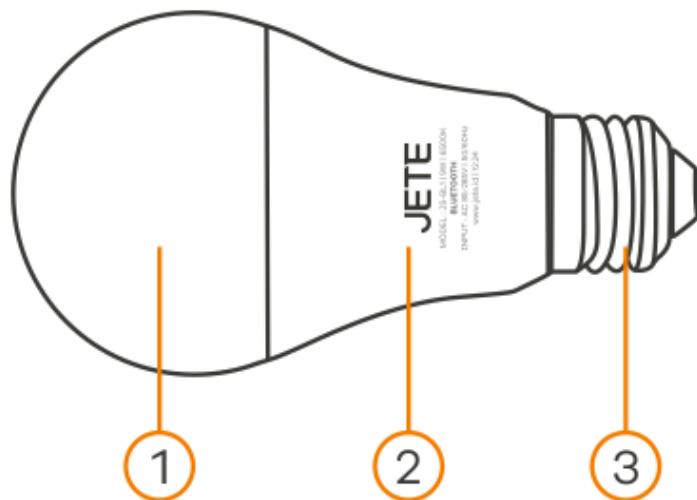

1. Glass Bulb
2. Lamp Shell
3. Lamp Base

How to Install and Register Applications:

QR Aplikasi
"JETE SMART"



 
 
 
 
App Store: JETE SMART



Google Play: JETE SMART



1. Go to the Play Store or App Store, or you can scan the QR code on the packaging.
2. Download and install the "JETE SMART" application.
3. First-time users must register first.
4. Select Sign Up to register.
5. Enter your email and country of residence.
6. Enter the verification code sent to your email address.
7. Enter your password.

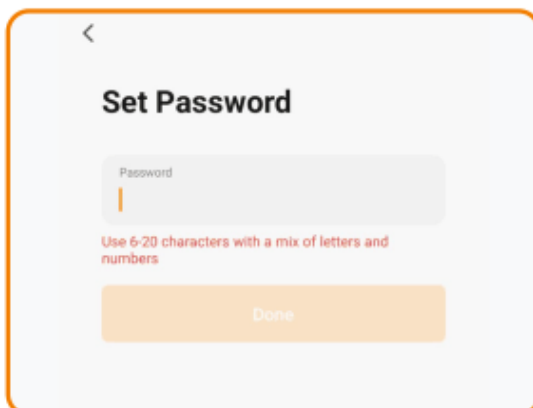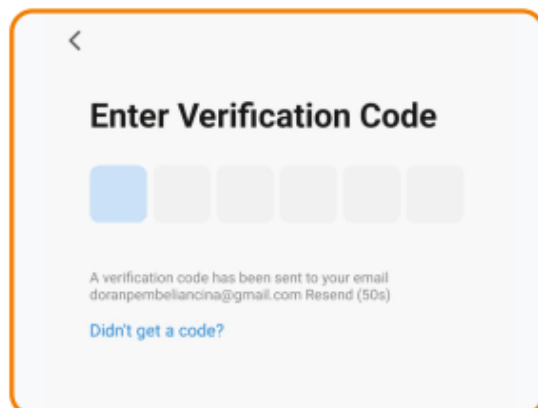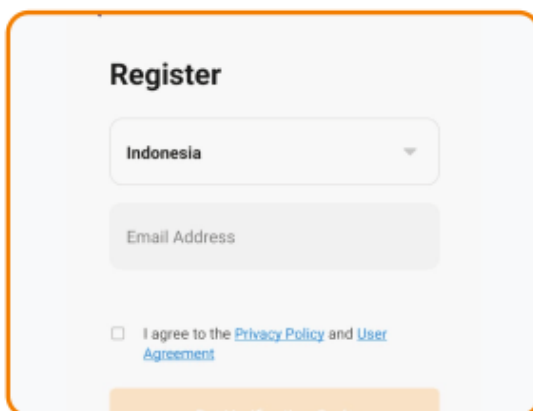
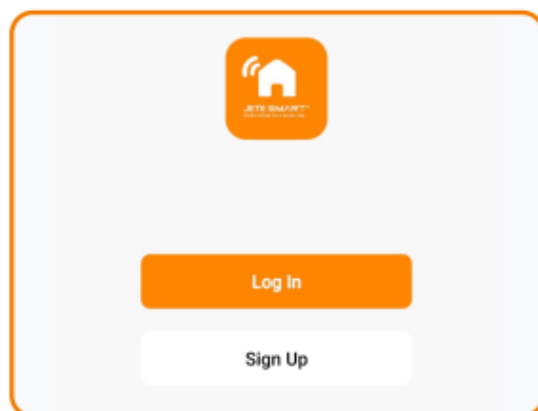


Note:


JETE SMART is an application designed to simplify the control of your JETE Smart Home devices.

How to Connect with Smartphone :

  1. Activate Bluetooth on your smartphone.
2. Make sure the light is on.
3. If the light does not flash, turn it on and off quickly 3x.
4. The light will continue to flash indicating the light is entering pairing mode.
5. Enter the "JETE SMART" application.
6. Select "Add Device" or select the "+" icon.

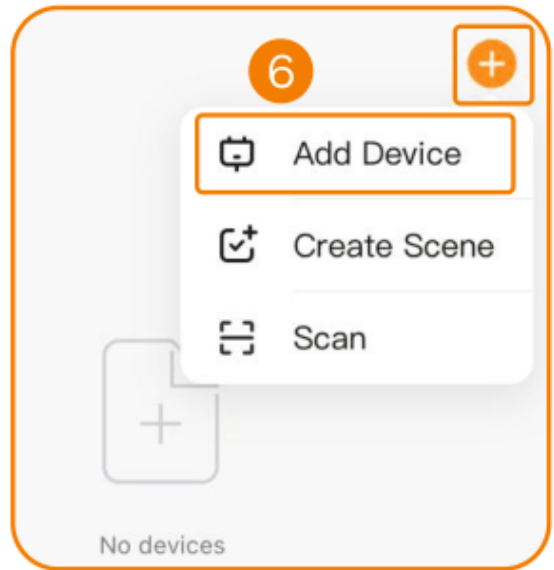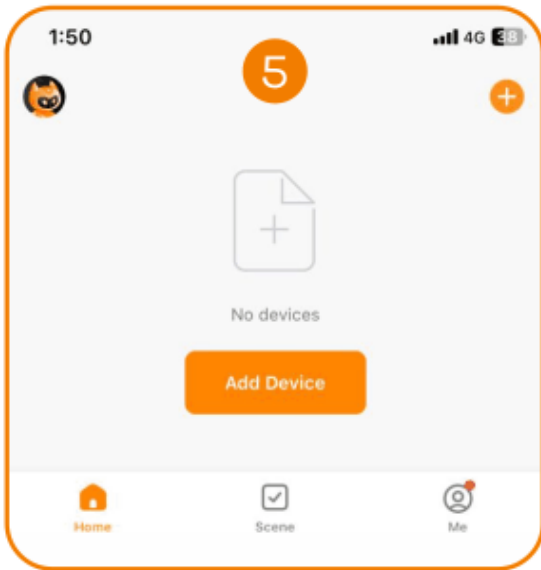

 
7. Select "JETE-BL1BT".
8. The light will stay on indicating successful pairing.

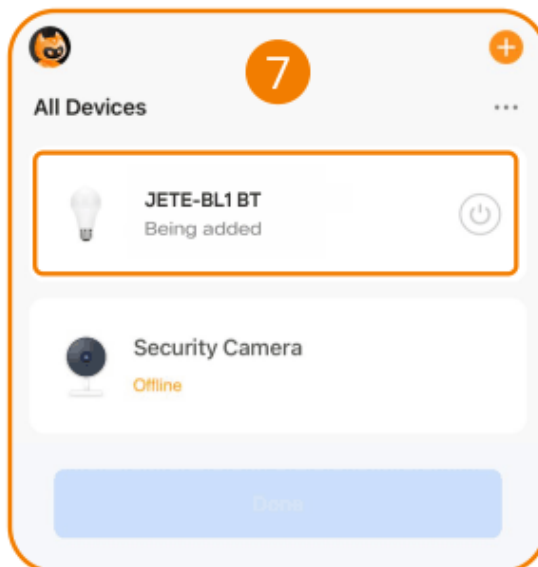


How to Use :

  
 
How to Turn the Lights On and Off :


Press the "  " icon to turn the light on/off.

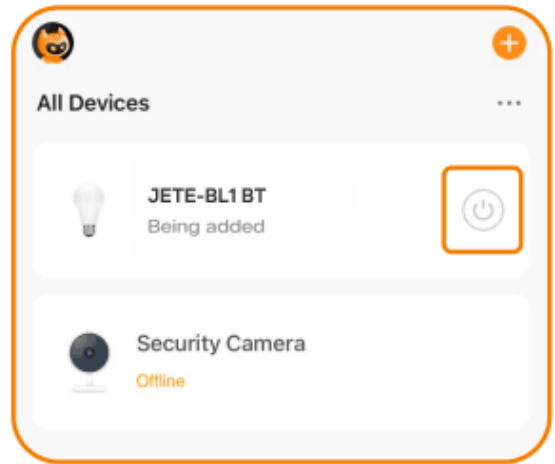

 How to Change the Color of the Lights :

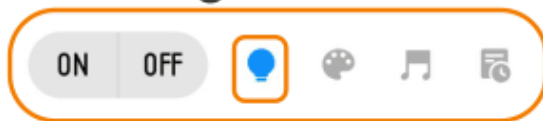


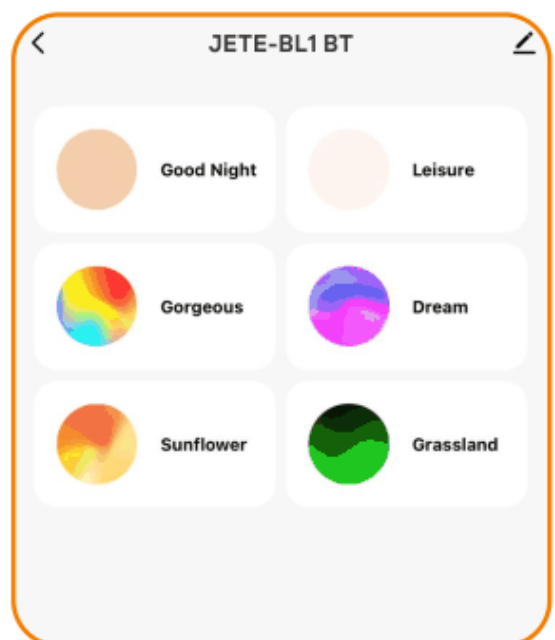 
1. Enter the light menu
2. Select the "  " menu.
3. Select the "White / Color" color category.
4. Select the color as desired.
5. Also adjust the light intensity by sliding the "  " icon as needed.

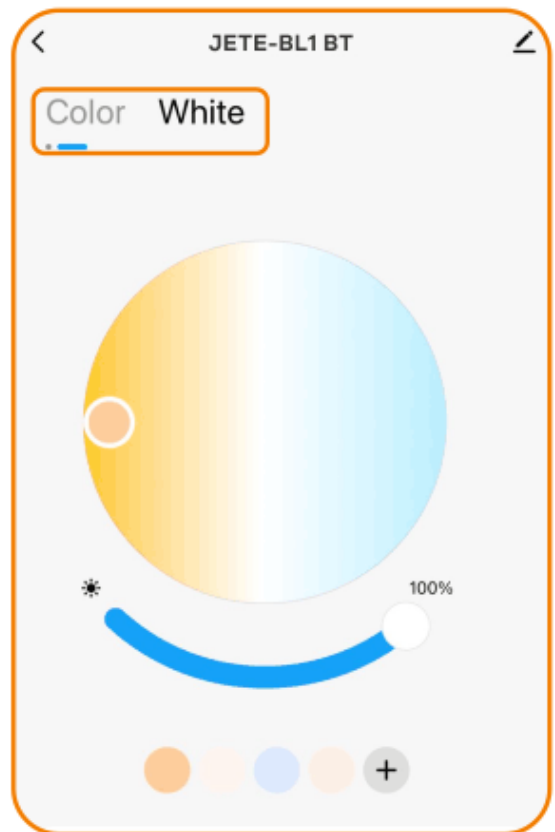

How to Change Light Mode :



 
1. Enter the lights menu.
2. Select the "  " menu.
3. Select a mode.
4. The lights will change according to the selected atmosphere.



How to Change Light Mode to Music :




1. Enter the light menu
2. Select the "🎵" menu.
3. Select one of the modes.
4. The light will change color along with the beat of the song being played.

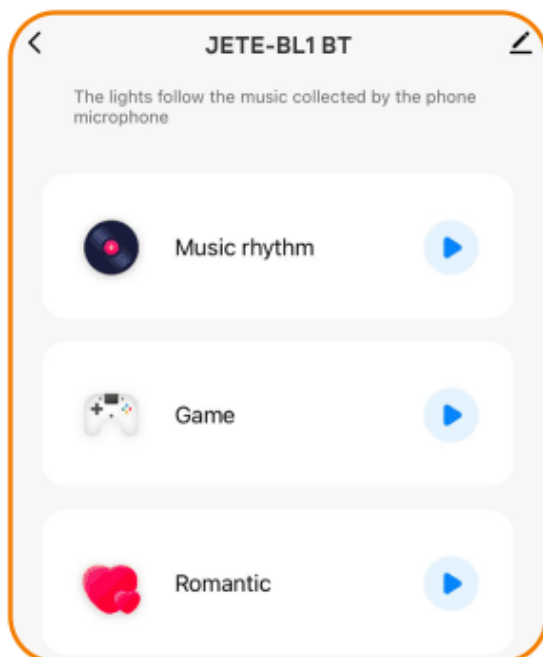


How to Set the On/Off Time for the Lights :



 
1. Enter the light menu.
2. Select the "🕒" menu.
3. Slide the "Countdown" lever to directly set how many minutes the light will be on / off.

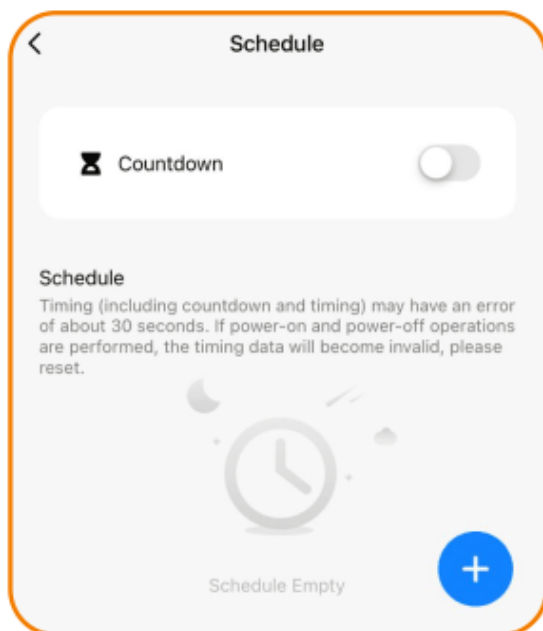


 
How to Set the On and Off Schedule for the Lights :

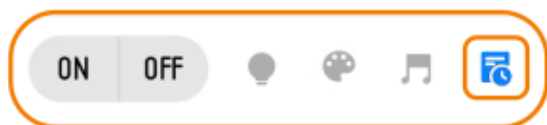

 1. Enter the light menu
2. Select the "🕒" menu.
3. Select the "+" icon
4. Set the desired time.

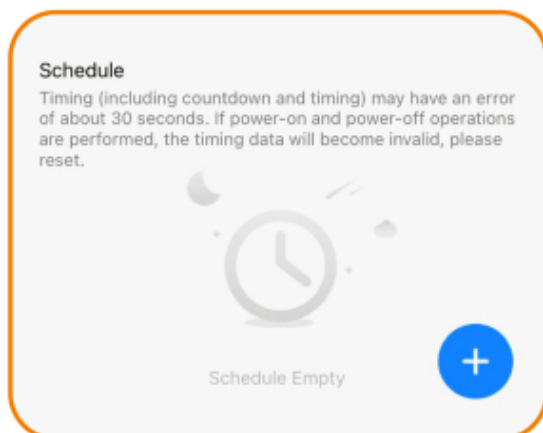

  5. Select action (On/Off).
6. Select repeat (Once/Daily/Custom).
7. If you choose custom, select the desired days.

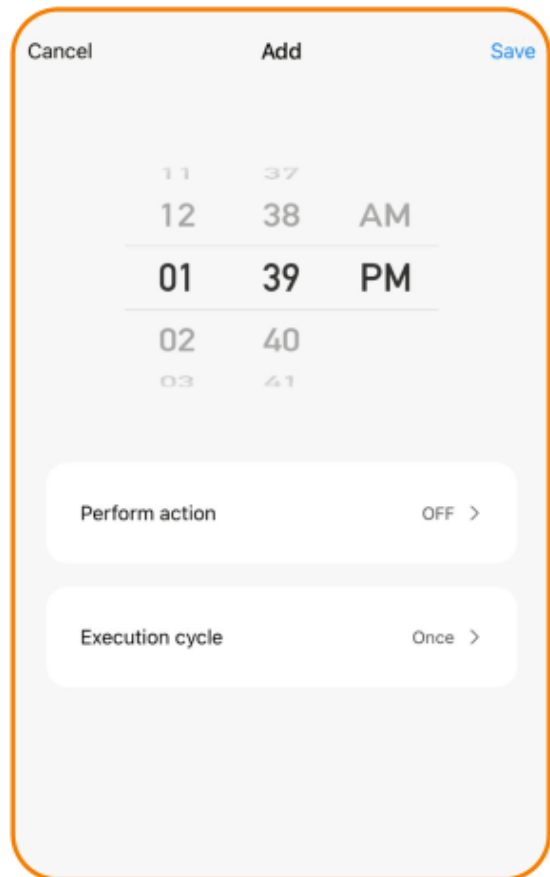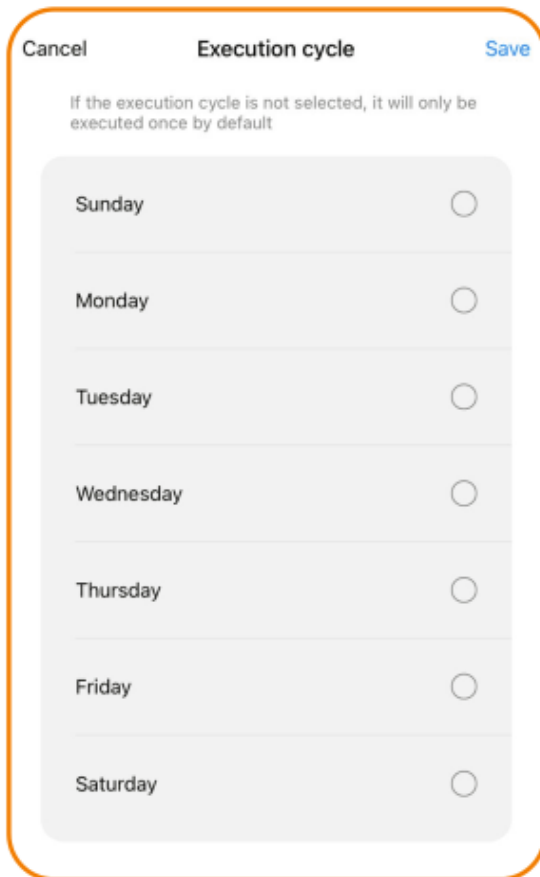

Spesification :

Code	: A60S RGB 9W
Input Voltage	: AC 85-285V 50/60Hz
Rated Current	: 67mAh
Power	: 9W
CCT	: RGB+(2700K-6500K)
CRI	: >80
Beam Angle	: 200
Life Time	: 15000H
Operating Temp	: -20°C-40°C
Size	: 60x115mm
Lamp Base	: E27

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
 - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
 - The product must still be within the specified warranty period.
 - Warranty card that has been filled out.
 - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
 - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609.

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
 - Disfunction.
 - Audio not detected.
 - Indicator off.
 - Battery damage.
6. This warranty DOES NOT APPLY if:
 - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
 - MODIFIED YOURSELF, SOAKED IN WATER.
 - Supporting accessories such as: cables, adapters, etc.
 - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
 - The product has been repaired by a third party.
 - The data is not filled in completely by the seller and buyer.
 - Damage caused by user error.
 - The product warranty period has expired.

**2 YEARS
WARRANTY**

NEW REPLACEMENT
FOR ANY FAULTS *T&C



Contact Us

JETE WARRANTY POINTS

