

JETE

**WARRANTY CARD and
USER MANUAL**

SPEAKER SM202



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE

 **081217393609**

 
 jete.id  jeteindonesia

 jeteindonesia  jeteindonesia

JETE

USER MANUAL

SPEAKER SM202

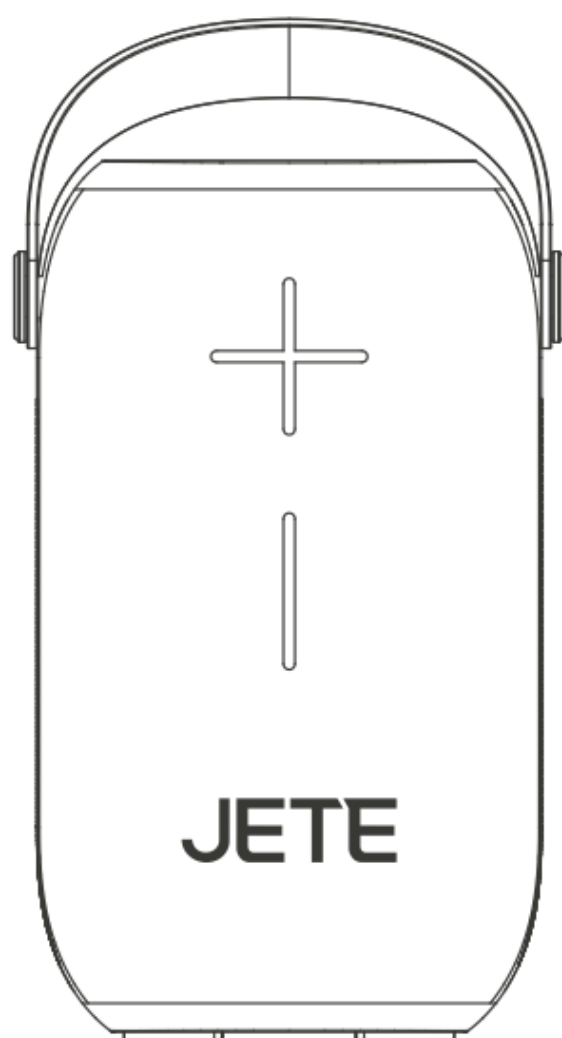

IMKG.2151.10.2020

Please read the instructions carefully
before using the product.

Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

Content Package :




SM202



Microphone



 AUX
Cable

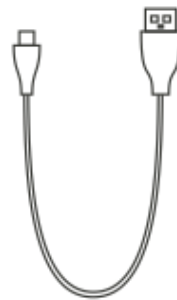


Charging
Cable




User
Manual

 Description Structure Product :

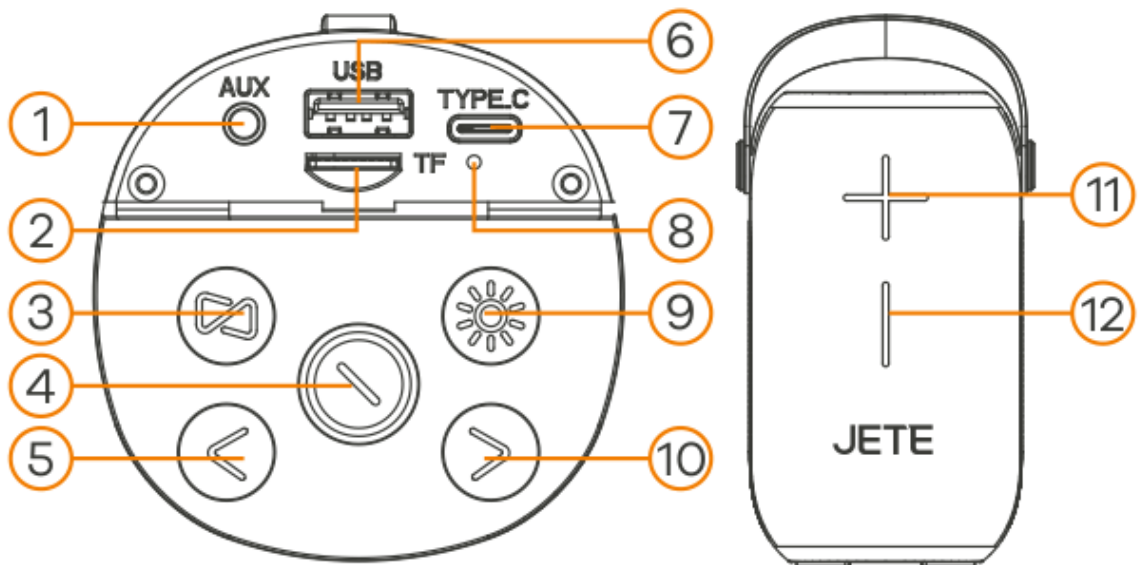

- | | | |
|----------------|------------------|---------------------|
| 1. Port AUX | 5. Previous | 9. LED Button |
| 2. Memory Slot | 6. Port USB | 10. Next Button |
| 3. Mode Button | 7. Charging Port | 11. Volume + Button |
| 4. MFB | 8. Indicator LED | 12. Volume - Button |

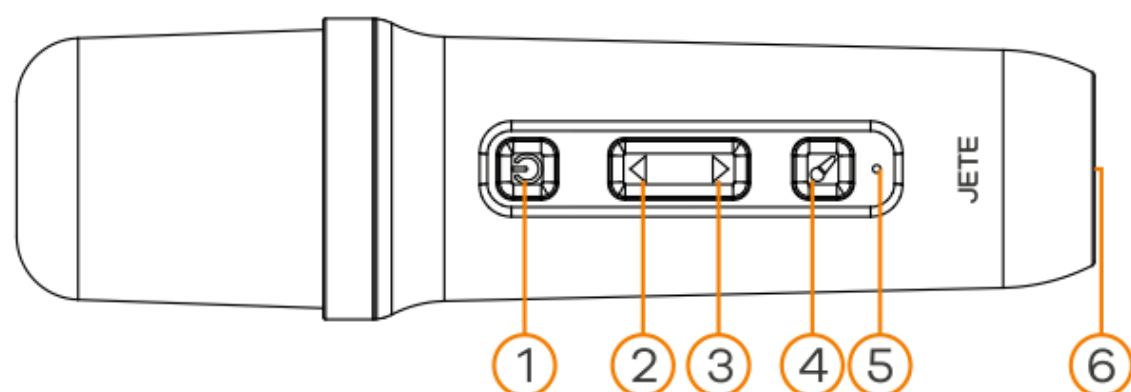 

- | | |
|--------------------|------------------|
| 1. Power Button | 4. Sound Mode |
| 2. Volume + Button | 5. Indicator LED |
| 3. Volume - Button | 6. Port |

How to Use :

Turning the Speaker On and Off :

- Press the MFB button for 2 seconds to turn on the speaker, the indicator light will flash blue.
- Press the MFB button for 2 seconds to turn off the speaker.

Connecting Bluetooth With Device :

- Turn on the speaker, the LED indicator will flash blue continuously, indicating that the speaker is ready to be paired.
- Turn on Bluetooth on the device.
- Activate search and select "JETE-SM202".
- Once connected, a sound indicator will be heard from the speaker.
- The speaker will automatically connect to the previous device when turned on.

How to Play Music :

- Press once on the MFB button to play/pause music.
- Press once on the < button to play the previous song.
- Press once on the > button to play the next song.

- Press once on the – button to decrease the volume.
- Press once on the + button to increase the volume.

Changing Mode :

Press once on the mode button to change mode (Bluetooth/Memory Card/AUX/FD).

How to Use AUX Cable :

Connect the device to the speaker via a 3.5mm dual audio cable, then the speaker will automatically recognize the device.

Using Memory Card :

Insert the memory card and the speaker will automatically recognize the card and start searching for mp3 format music on it.

How to Use USB Disk :

Plug in a USB Disk and the speaker will automatically play the music on the disk.

How to Connect a Microphone to the SM202 :

- Press and hold the power button on the microphone for 2 seconds, the indicator will flash blue.
- Wait until the indicator stays blue, indicating successful pairing.

How to Increase or Decrease Microphone Volume :

- Press the volume + / - button on the microphone once, to increase or decrease the microphone volume.

How to Charge the Speaker :

- Use a Type-C cable to charge.
- Use the charger provided by the manufacturer.
- Battery usage will decrease with use and due to repeated charging.
- The indicator light will turn red and will turn off when charging is complete.

How to Change Microphone Sound Mode :

- There are 6 sound mode options, press the "🔊" button on the microphone once, the sound indicator will appear according to the selected mode.

Spesification :

Bluetooth	: V5.3
Size	: 140*105*213mm
Output	: 8W*2
Battery	: 3.7V/3000mAh
Play Time	: 6 H
Charging Time	: 5-6 H
Support	: Bluetooth, AUX, Memory, Port Type-C
Wireless Range	: 10M (Without Obstacles)
Frequency	: 20Hz-20KHz
Weight	: 1057g

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
 - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
 - The product must still be within the specified warranty period.
 - Warranty card that has been filled out.
 - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
 - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
 - Disfunction.
 - Audio not detected.
 - Indicator off.
 - Battery damage.
6. This warranty DOES NOT APPLY if:
 - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
 - MODIFIED YOURSELF, SOAKED IN WATER.
 - Supporting accessories such as: cables, adapters, etc.
 - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
 - The product has been repaired by a third party.
 - The data is not filled in completely by the seller and buyer.
 - Damage caused by user error.
 - The product warranty period has expired.

**2 YEARS
WARRANTY**

NEW REPLACEMENT
FOR ANY FAULTS *T&C



Contact Us

JETE WARRANTY POINTS

