

JETE

WARRANTY CARD and USER MANUAL

VIDEO CONFERENCE JETE MEETBAR



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE



081217393609



jete.id



jeteindonesia



jeteindonesia

 


jeteindonesia

JETE

USER MANUAL

VIDEO CONFERENCE
JETE MEETBAR

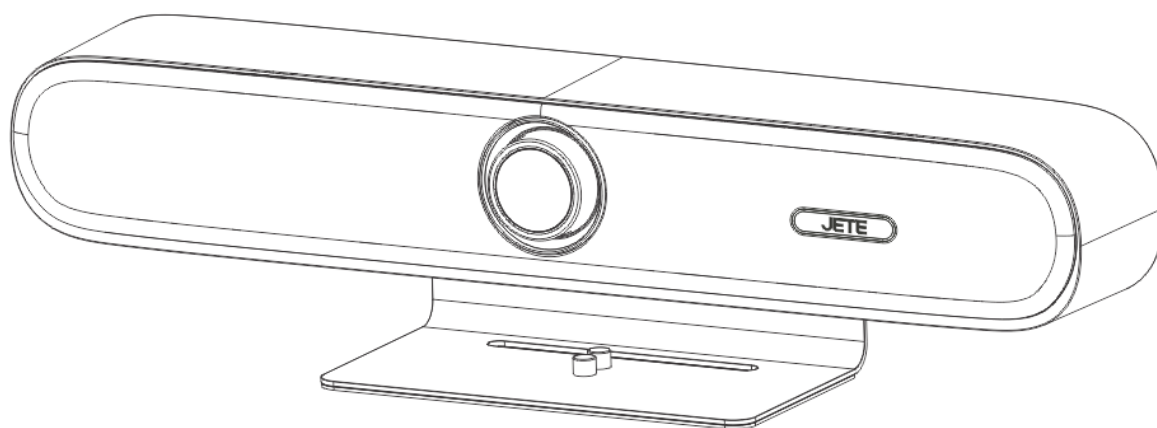


IMKG.1573.10.2021

Please read the instructions carefully
before using the product.


1. Product Introduction :

Thank you for purchasing a JETE product. For optimal and safe performance, please read the instructions carefully before using this product.

 2. Package Contents :

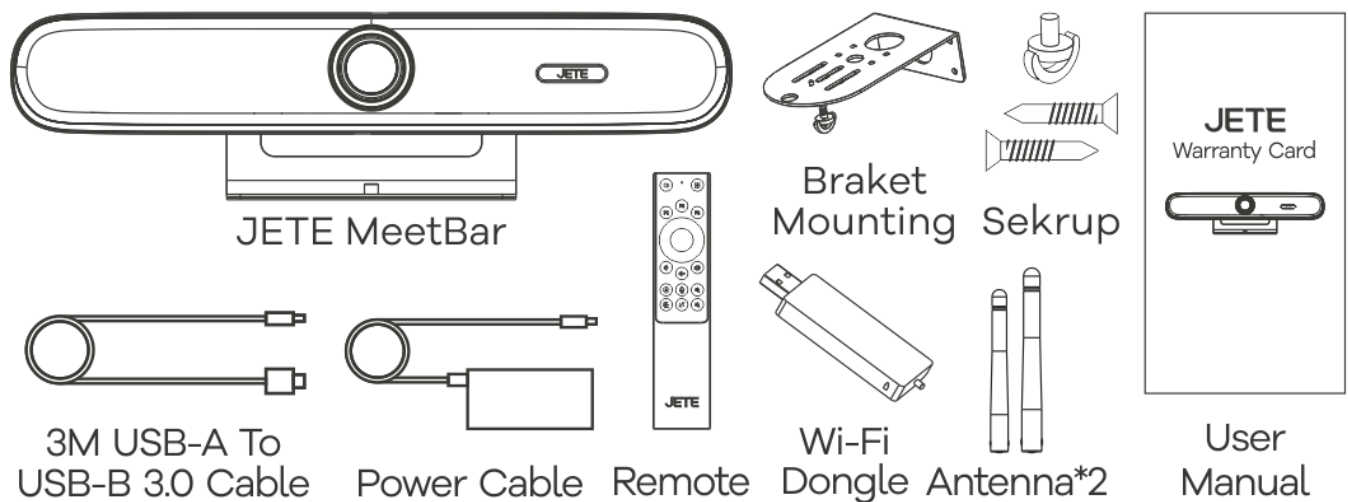


3. Product Structure Description :

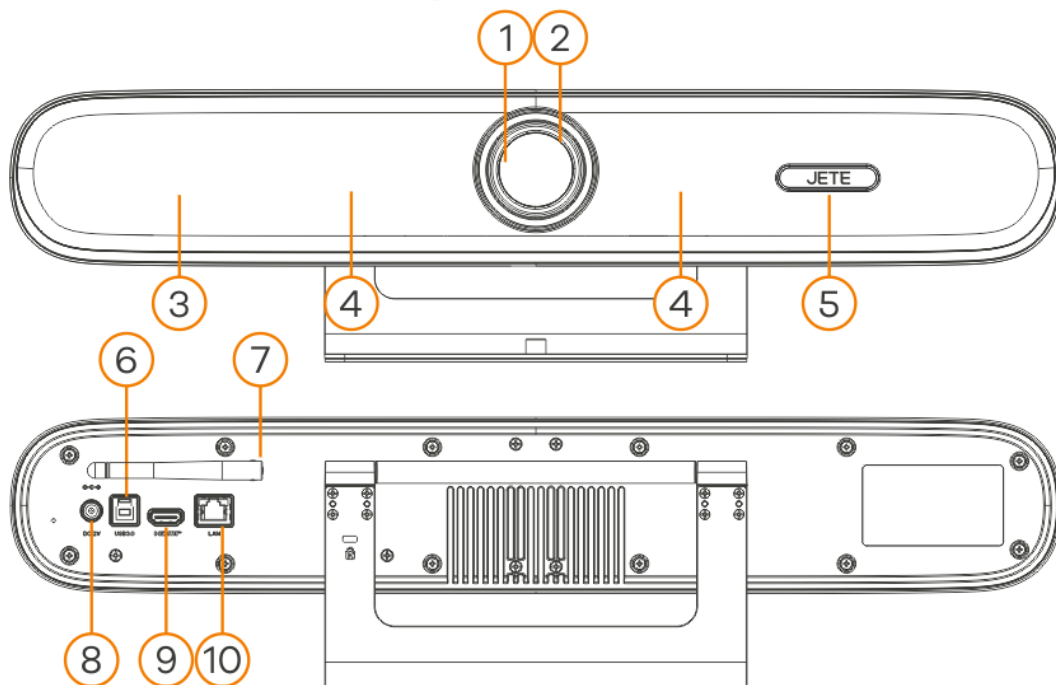

- | | | |
|--------------------|----------------------------|--------------------|
| 1. Lens | 5. Infrared | 8. Power Port |
| 2. Indicator Light | 6. USB-A to USB-B 3.0 Port | 9. Multimedia Port |
| 3. Speaker | 7. Antenna Port | 10. Ethernet Port |
| 4. 8 Microphone | | |

4. Remote Control Button Description


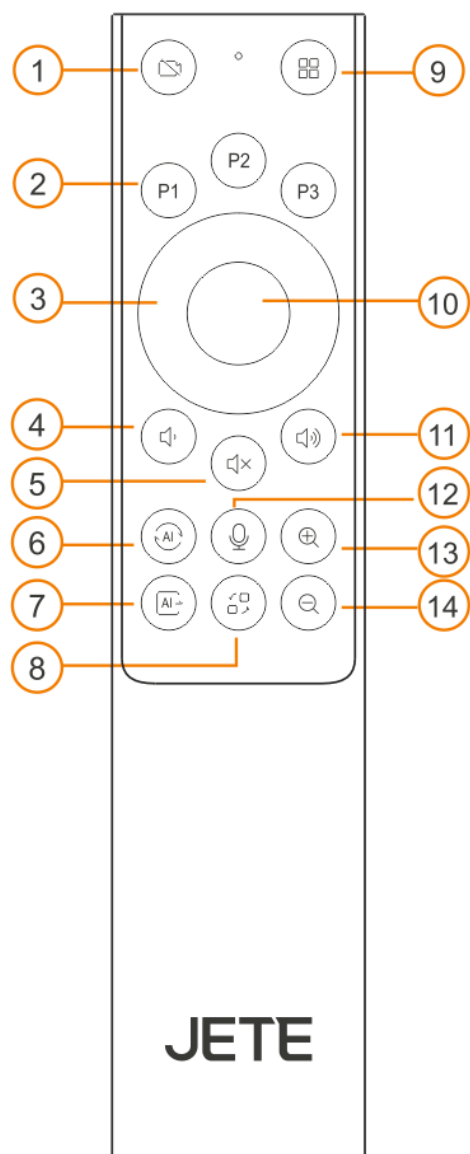


1	Power Button	Turns the device on and off
2	Preset Button	Saves and recalls presets
3	Pan & Tilt	Navigates to move the camera
4	Volume -	Decreases the volume
5	Mute	Mutes the sound
6	AI	Activates or switches AI features
7	Exit AI	Deactivates the AI feature
8	FOV Switch	Changes the camera's field of view
9	Menu	Displays the camera menu or settings
10	Confirm Button	Confirms menu or settings
11	Volume +	Increases the volume
12	Mic On/Off	Turns the microphone on or off
13	Zoom In	Zooms in the image
14	Zoom Out	Zooms out the image

5. Installing the Camera


A. Installing on a Flat Surface

- The JETE MeetBar comes with a built-in desktop stand.
- If your laptop, monitor, or TV is placed on a table, you can position the JETE MeetBar directly on that surface.
- Adjust the stand angle to tilt the camera as needed to achieve the desired viewing angle.

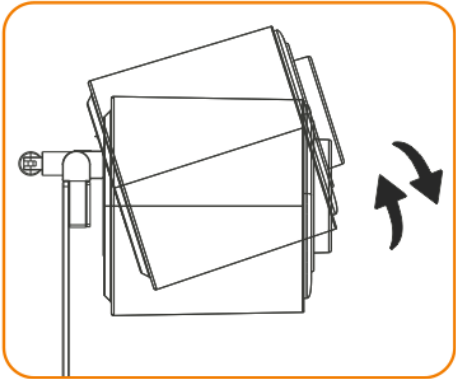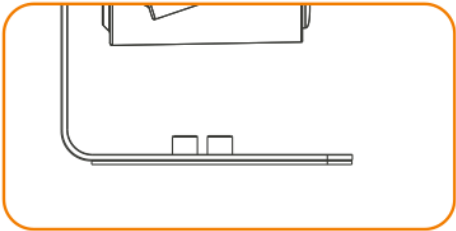


B. Installing on Ceiling & TV


- The JETE MeetBar can be mounted on a wall or TV bracket using a compatible mounting bracket.

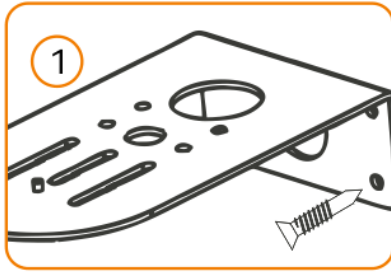

Attach the vertical bracket to the wall using screws.

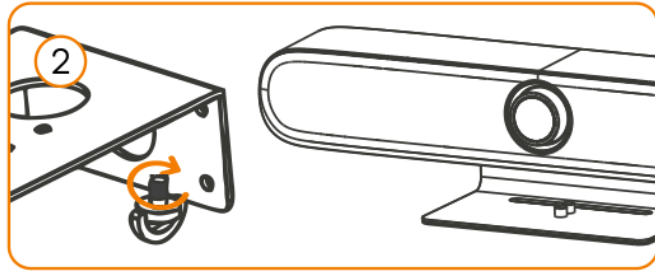

Turn the screw clockwise to secure the JETE MeetBar.

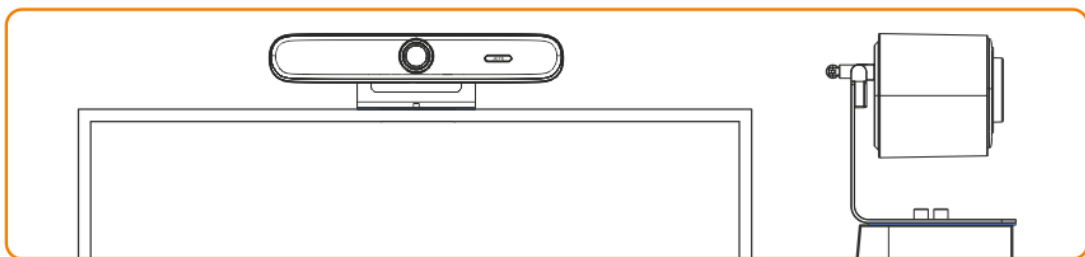

Note : The TV bracket is not included in the package and must be purchased separately.

6. How to Use

A. How to Save and Recall Presets

1. Adjust the desired camera angle.
2. Press and hold the Preset button (P1/P2/P3) for 5 seconds.
3. The preset will automatically save the camera's viewing angle.
4. Press the Preset button (P1/P2/P3) once to recall the saved preset.

B. Using AI Function

B.1 Speaker Tracking

The JETE MeetBar uses sound localization technology based on microphones to detect the speaker's position.

The device will automatically switch to a close-up view when:

- The speaker talks for more than 3 seconds, and
- The speaker's direction changes by more than 20°. (This feature is designed to minimize unnecessary camera switching.)

B.2 Mode Diskusi

In a scenario with multiple speakers, JETE MeetBar will first display the full view when a new speaker begins speaking.



B.3 Speaker Close-Up Mode / Speaker Mode

- In a scenario with multiple speakers, JETE MeetBar will first display the normal view.
- After 7–8 seconds, the view will automatically switch to a close-up of the active speaker.



B.4 Mode PIP (Picture in Picture)

The main screen will display the full conference view, while a small window in the lower right corner will show close-ups of the last two speakers.



B.5 Individual Tracking / Single

By combining intelligent framing and mechanical movement, JETE MeetBar smoothly follows the subject's movement, keeping the image focused and clear at all times.




B.6 Multiple People Tracking

JETE MeetBar automatically detects all individuals within the camera's capture area, then adjusts the display so that everyone remains visible within the frame simultaneously.



7. Connectivity Options

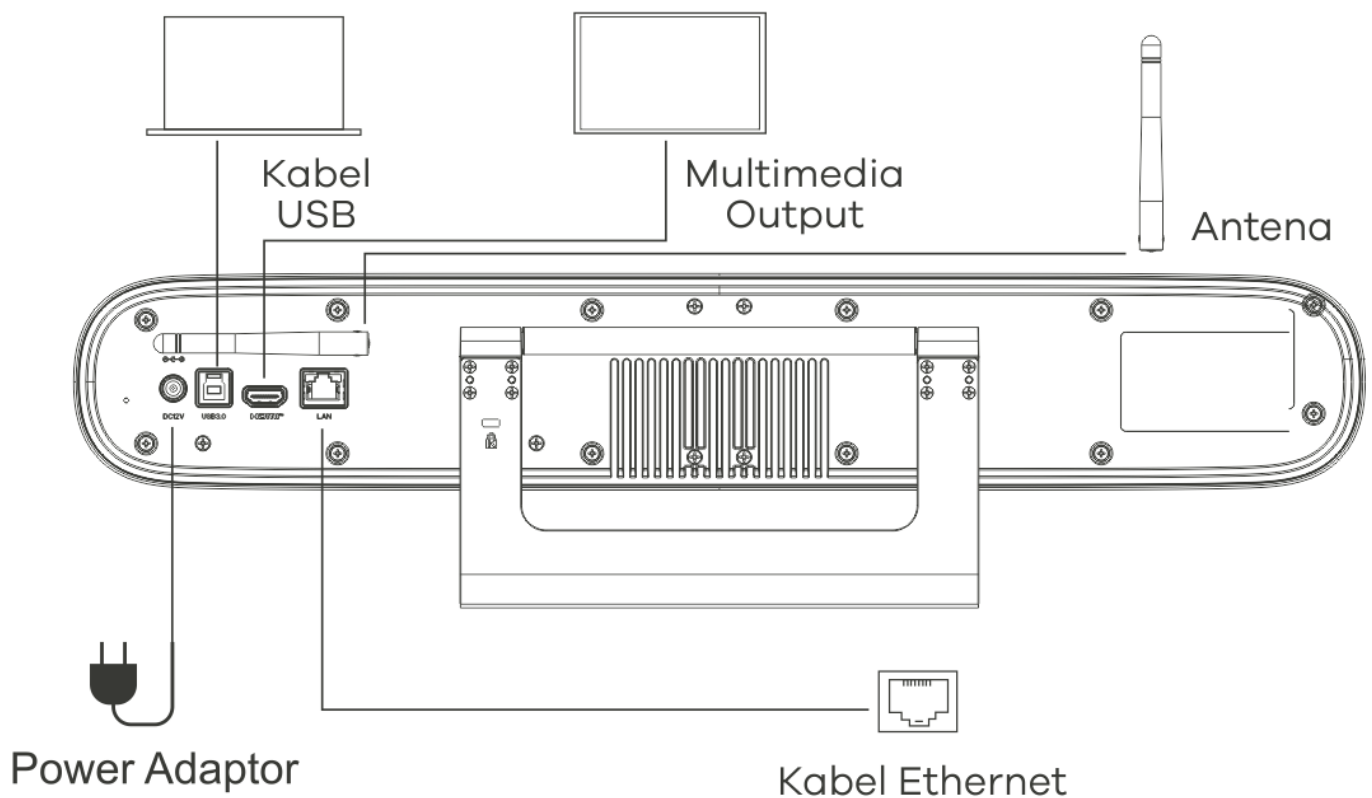

A. Connection to TV/Display

Connect the multimedia output port on the JETE MeetBar device to the input port of another multimedia device, such as a monitor or television, using the appropriate cable. Once connected, the video display from the JETE MeetBar will automatically appear on the screen, showing the main interface ready for use in presentations or video conferences.

B. Connection to Computer


1. Use the provided USB cable to connect the JETE MeetBar to the computer.
2. Then, select JETE MeetBar as the Output device, Output speaker, and Microphone Input in the meeting application being used.

C. Network Connection

JETE MeetBar supports two types of network connections:

- C.1 Wireless Network (Wi-Fi)
- C.2 Wired Network (Ethernet/RJ45)

C.1 Wireless Network (Wi-Fi)

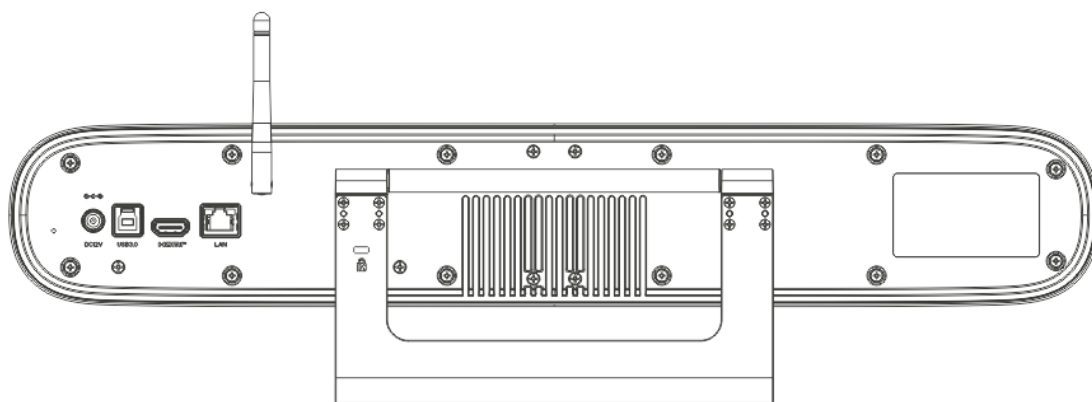


1. Attach the included Wi-Fi antenna to the antenna port on the back of the JETE MeetBar.
2. Connect the included Wi-Fi Dongle to the USB port on the computer. When the white LED light blinks 10 times, select JETE MeetBar as the Output video device, Output speaker, and Microphone Input in the meeting application being used.

Wi-Fi Dongle LED Status Guide :

LED Status	Description
Red On	Device is powered on
Red Blinking Slowly	Searching for network
White Blinking Rapidly (10x)	Successfully connected to the network
White Blinking Slowly	Connected, but no video output yet
White On	Video output successfully activated

Note : If the device fails to connect, press the reset button on the Wi-Fi Dongle using a small pin for 3 seconds until the indicator light blinks red and white, indicating a successful reset.

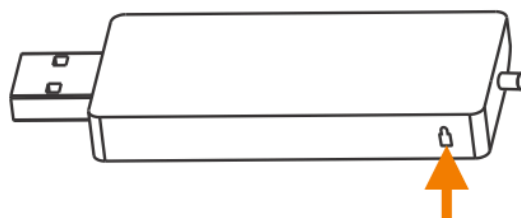


C.2 Wired Network (Ethernet/RJ45)

1. Connect the JETE MeetBar to the Ethernet port on your computer or to the internet network via a router or switch.
2. To access the JETE MeetBar, enter the IP address of the JETE MeetBar in your browser.
3. Adjust your computer's IP settings according to the JETE MeetBar network. Purpose: To ensure the computer and MeetBar are within the same network.

Steps:

- 3.1 Open Control Panel > Network and Sharing Center, then select Change adapter settings.
- 3.2 Right-click on the active Ethernet or Wi-Fi connection, then select Properties.
- 3.3 Select Internet Protocol Version 4 (TCP/IPv4), then click Properties.

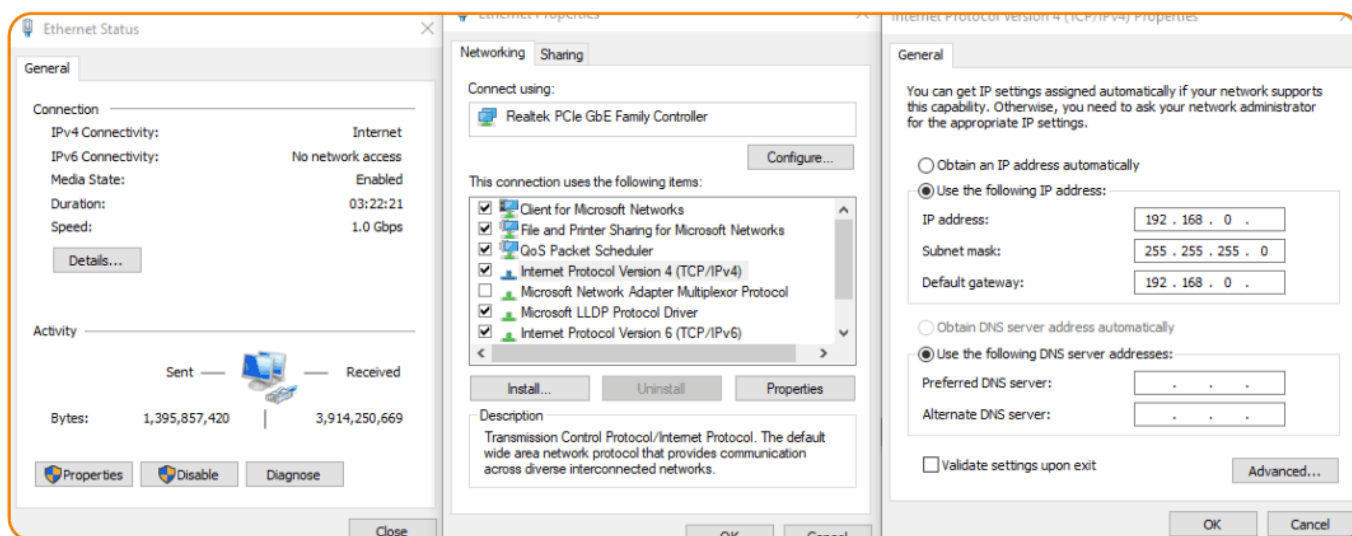

Set manually:

IP Address: 192.168.0.189

Subnet Mask: 255.255.255.0

Default Gateway: Adjust according to your network settings.

Notes:

- The default IP address of JETE MeetBar is 192.168.0.189 (make sure there is no IP conflict).
- Failure to set subnet 0 (192.168.0.189) will result in a login failure.

Changing the JETE MeetBar IP Address to Match the Local Network:

IP Configuration Type	Static IP	
IP Address:	192.168.0.189	(0.0.0.0-225.225.225.225)
Subnet Mask:	255.255.255.0	
Gateway:	192.168.0.254	
MAC Address:	80:0d:ed:5c:30:05	
Preferred DNS	192.168.110.7	
Alternative DNS	192.168.110.8	

Purpose : To integrate JETE MeetBar into your existing local network.

Steps:

1. Access the JETE MeetBar web interface.
2. Enter `http://192.168.0.189` in your web browser.
3. Go to Setup > Network Settings > Local Network.

Update the following settings:

- IP Address: 192.168.x.189 (adjust according to your network subnet, e.g., 192.168.1.189)
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.x.254 (usually your router's IP address).


D. E Display Transition Effects

- Instant Cut : Instantly and quickly switches the view to the detected target.
- Smooth Transition : Provides a smooth transition resembling natural human movement, with algorithmically optimized perspective shifts for a comfortable visual experience.

8. Menu Description

Press the MENU button on the remote control to access the main video camera menu.

A. Menu Utama

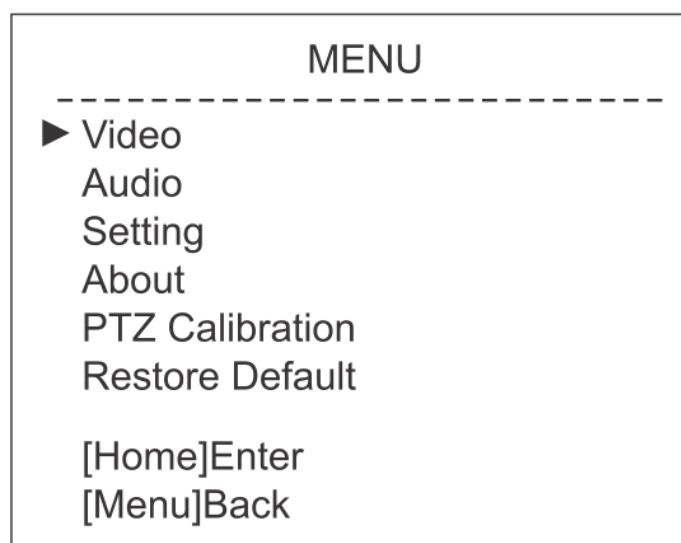

- Press the navigation buttons to select a menu.
- Press the "Confirm" button to enter a submenu.
- Press the "Menu" button to exit the menu display.

B. Menu - Video

VIDEO	

► 2D NR	Auto
3D NR	Auto
Style	ZOOM
Backlight	ON
Anti-flicker	50Hz
Picture Mirror	ON
UI Mirror	ON
HDMI Out	4K30
UVC Mode	Bulk Mode
Select	
Change	
[Menu]Return	

C. Menu - Audio

AUDIO	

Auto Gain	ON/OFF
Auto NR	ON/OFF

D. Menu - Setting

Setting	

► Language	English
EPTZ	ON
Zoom Limit	5X
Tracking Mode	Speaker tracking
Scene mode	Discussion scene
Tracking effect	Smooth switching
Tracking speed	Normal
▲▼ Select	
◀▶ Change	
[Menu]Return	

E. Menu - Information

Info	

Model	Meet Bar
Ip	192.168.2.168
Sw Ver.	1.17A_TV268_1_0509
Hw Ver.	1.0.0
[Menu]Return	

2D Noise Reduction : Auto, 1-5, Close

3D Noise Reduction : Auto, 1-5, Close

Style : Standard, ZOOM

Backlight : On, OFF

Anti-flicker : 50HZ, 60HZ

Horizontal Flip : On, OFF

Menu Flip : On, OFF

HDMI Out : 720P50, 720P60, 1080P25,
1080P30, 1080P50, 1080P60, 4K25,
4K30

UVC Mode: Isoc Mode, Bulk Mode

- Auto Gain : On, OFF
- Auto Noise Reduction : On, OFF

Language : Chinese, English

EPTZ: ON, OFF

Zoom Limit: 2X, 3X, 4X, 5X

Tracking Mode : Multi-person
tracking, Single-person tracking,
Speaker tracking, Speaker close-up
Scene mode : Discussion scene /
Speech scene

Tracking effect : Smooth switching /
Instantaneous switching

Tracking speed : Normal / Fast / Slow

F. Primary Menu - PTZ Calibration and Restore Default

PTZ Calibration	Restore Default
----- ▶ YES NO	----- ▶ YES NO
[Home]Enter [Menu]Back	[Home]Enter [Menu]Back

- Press the "Confirm" button to start PTZ Calibration
- Press the "Confirm" button to start Factory Reset

9. Product Specifications :

Digital Zoom	: 5X
Resolution	: 4K@30
Focus Mode	: Fixed Focus
Mode AI	: Single person tracking, speaker tracking, participant tracking, close-up of speaker
Video Encoding Format	: H.265/H.264/MJPEG
Network Protocol	: RTSP, RTMP, ONVIF; Support VISCA OVER IP
Microphone	: 8
Built-in Speaker	: 1, Sensitivity 83dB±2dB
Voice Pickup Range	: 6 Meters
HD Interface	: 1x Multimedia
USB Interface	: 1x USB 3.0, Type-B
Network Interface	: 1x RJ45
Antenna Interface	: 1x Antenna
IP Address	: 192.168.0.189
User Name	: admin
Password	: admin
Dimensions	: 522.7mm*107.5mm*135.3mm
Weight	: 2.4kg

10. USER DATA :

Tanggal :

Nama :

No. Telepon :

Alamat :

Model :

Toko :

11. TERMS AND CONDITIONS OF WARRANTY :

- Avoid exposing the device to steam or humid places, as this may affect the internal circuitry.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extremely high or low temperatures, as this may damage the device or deform certain plastic parts.
- Keep the device away from sharp objects to prevent scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this may cause circuit damage.
- Always store the device at room temperature.

12. WARRANTY TERMS & CONDITIONS :

1. The warranty is valid for 2 years for genuine JETE products.
2. This warranty is valid for the duration stated on the product packaging from the date of purchase.
3. During the warranty period, users are exempt from any replacement costs that may occur.
4. Users must present the warranty card and proof of purchase when submitting a warranty claim.
5. The warranty covers functional damages such as:
 - * Total power failure.
 - * Audio not detected.
 - * Indicator not working.
 - * Battery damage.
6. This warranty does NOT apply if:
 - * The product is broken, cracked, burned, dropped, self-modified, or submerged in water.
 - * Supporting accessories such as cables, adapters, etc. are damaged.
 - * The product is used abnormally, improperly stored, modified, or damaged intentionally or due to natural disasters.
 - * The product has been repaired by unauthorized third parties.
 - * The warranty card is incomplete or incorrectly filled by the seller or buyer.
 - * Damage is caused by user error.

13. HOW TO CLAIM JETE WARRANTY :

1. All types of warranty claims can be made at the official outlets listed on the warranty card.
2. Buyers may visit an official outlet or contact Customer Service at 0812-1739-3609 if they wish to exchange products online.
3. All shipping or delivery costs are the responsibility of the buyer.
4. When making a warranty claim, the buyer **MUST** provide the following:
 - Proof of purchase showing the outlet name and transaction date clearly.
 - The product must still be within the warranty period.
 - A completed warranty card.
 - Product box/packaging.
5. Please inform our staff about any product issues or damage encountered.
6. The warranty will **NOT** apply if the damage is found to be caused by misuse, such as:
 - Broken, cracked, burned, dropped, self-modified, or submerged in water.
7. If any issues occur during the warranty claim process or if there are other inquiries, please contact Customer Service at 0812-1739-3609.

**GARANSI
2 TAHUN**



Kontak Kami

TITIK PENUKARAN GARANSI PRODUK :

SELURUH INDONESIA

