

# JETE

## USER MANUAL HEADPHONE SA3



Please read the instructions carefully  
before using the product.


## Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.


## Content Package :



 SA3

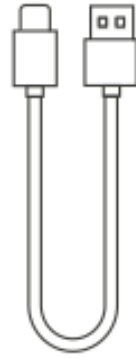


Charging  
Cable

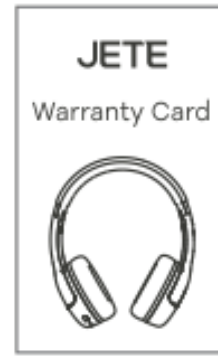 

User  
Manual

## Description Structure Product :

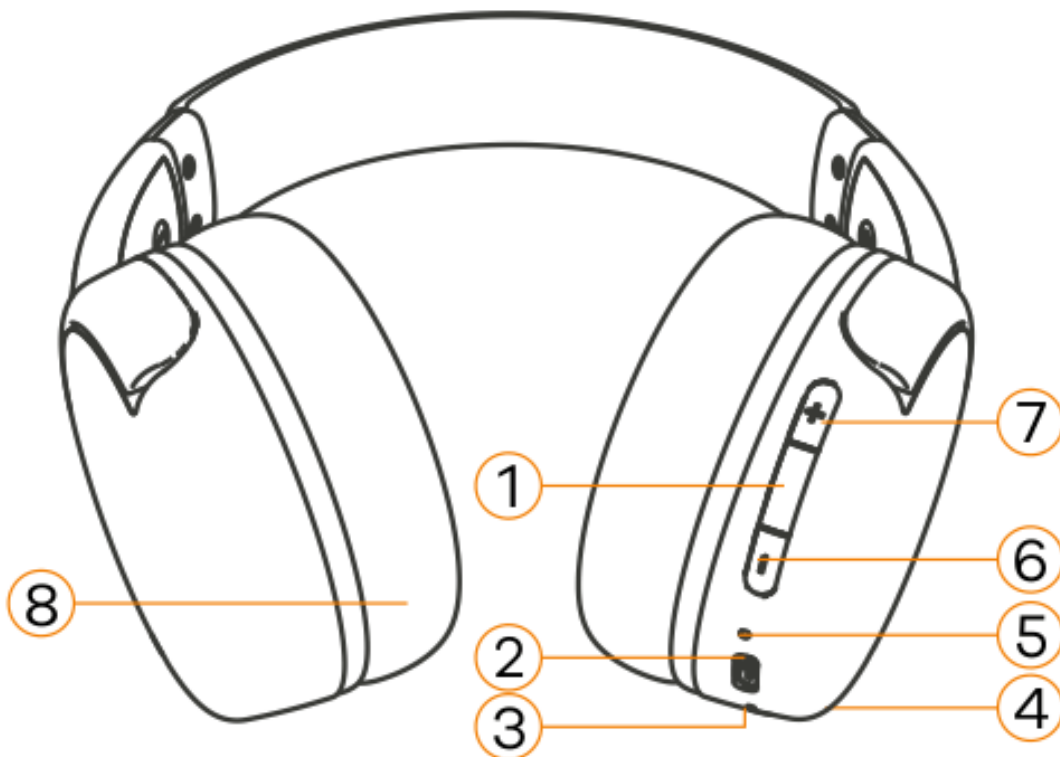 

1. MFB
2. Port USB-C
3. Microphone
4. Mode Button

5. Light Indicator
6. (-) Button
7. (+) Button
8. Earpad

## **Tips:**

- Regular use of the headphones is the easiest form of maintenance.
- It is recommended to listen to music at a moderate volume to protect your hearing.

## **How to Use :**

### **How to Turn On the Headphones:**

Press and hold the MFB button for 3 seconds until the indicator light flashes red and blue, indicating the headphones are ready to pair.

### **How to Turn Off the Headphones:**

Press and hold the MFB button for 3 seconds until the indicator light flashes red once, indicating the headphones are powered off.

### **How to Connect a Device to the Headphones:**

1. Turn on the headphones. The indicator light will flash red and blue, indicating pairing mode.
2. Enable Bluetooth on your device.
3. Search for and select "JETE-SA3".
4. Once connected, a voice prompt will be heard and the indicator light will flash blue.

### **Notes:**

- The headphones feature a memory function and will automatically reconnect to the last paired device when turned on.
- The connection will disconnect when you move out of the headphone's operating range (10 m) and will automatically reconnect when you return within range within 3 minutes.

### **How to Answer a Call:**

Press the MFB button once to answer an incoming call.

Tip : Some devices only allow calls to be answered directly from the device. Please follow your device's instructions.

### **How to End a Call:**

Press the MFB button once to end the call.

### **How to Reject a Call:**

Press and hold the MFB button for 2 seconds when there is an incoming call.

### **How to Redial the Last Number:**

Press the MFB button three times to call the last dialed number.

### **Music Controls:**

- Press the MFB button once to play or pause music.
- Press the (-) button once to decrease the volume.
- Press the (+) button once to increase the volume.
- Press and hold the (-) button for 2 seconds to play the previous track.
- Press and hold the (+) button for 2 seconds to play the next track.

### **How to Activate the Voice Assistant:**

Press the MFB button twice to activate the voice assistant.

### **How to Switch Modes:**

Press the Mode button once to switch between Gaming Mode and Music Mode.

### **How to Restore Factory Settings:**

Press and hold the Volume (+) and Volume (-) buttons simultaneously for approximately 5 seconds until the indicator light flashes purple 3 times, indicating the headphones have been successfully reset.

## How to Charge the Headphones:

- Use a USB-C charging cable to charge the headphones.
- For first-time use, charge the headset for 1.5 hours.
- During charging, the indicator light will turn on and will automatically turn off once charging is complete.

 
## Product Specification :

Bluetooth Version	: V5.4
Usage Time	: Up to 45 hours
Talk Time	: Up to 35 hours
Standby Time	: >300 hours
Gaming Latency	: 80 ms
Impedance	: $32\Omega \pm 15\%$
Sensitivity	: 102 dB $\pm 3$ dB
Battery Capacity	: 430 mAh
Microphone Sensitivity	: -42 dB
Frequency Range	: 20 Hz – 20 kHz
Input Voltage	: DC 5V/1A
Wireless Range	: 10 m (No obstacles)
Charging Time	: 2 hours
Weight	: 152 g

# JETE

**WARRANTY CARD and  
USER MANUAL**

**HEADPHONE SA3**

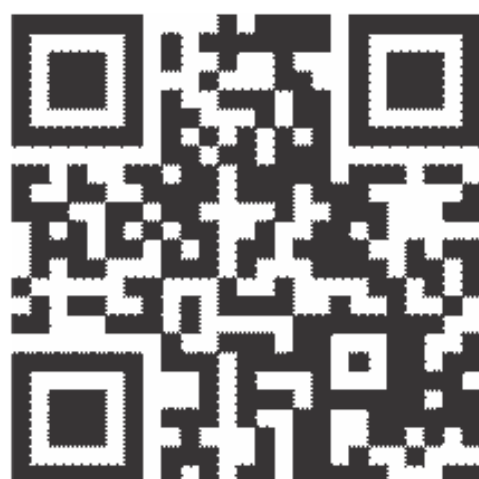

e-Usermanual

IMPORTIR

**PT. DORAN SUKSES INDONESIA**

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE



081217393609



jete.id



jeteindonesia



jeteindonesia



jeteindonesia

## Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

## How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
  - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
  - The product must still be within the specified warranty period.
  - Warranty card that has been filled out.
  - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
  - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

## Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
  - Disfunction.
  - Audio not detected.
  - Indicator off.
  - Battery damage.
6. This warranty DOES NOT APPLY if:
  - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
  - MODIFIED YOURSELF, SOAKED IN WATER.
  - Supporting accessories such as: cables, adapters, etc.
  - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
  - The product has been repaired by a third party.
  - The data is not filled in completely by the seller and buyer.
  - Damage caused by user error.
  - The product warranty period has expired.

**2 YEARS  
WARRANTY**

**NEW REPLACEMENT  
FOR ANY FAULTS \*T&C**



Contact Us

**JETE WARRANTY POINTS**

