 


# JETE

## USER MANUAL

### MOUSE MKS201

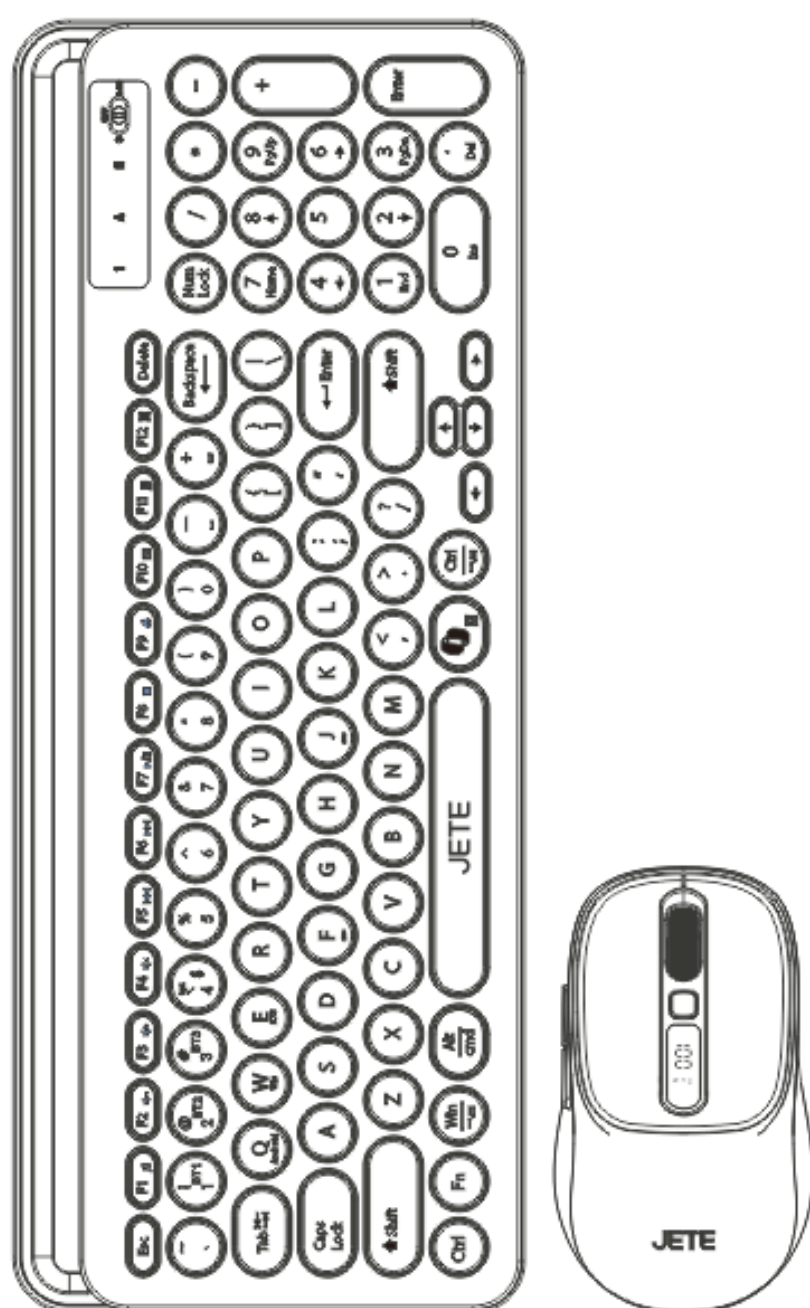 


Please read the instructions carefully before using the product.

## Product Introduction :


Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

## Content Package :

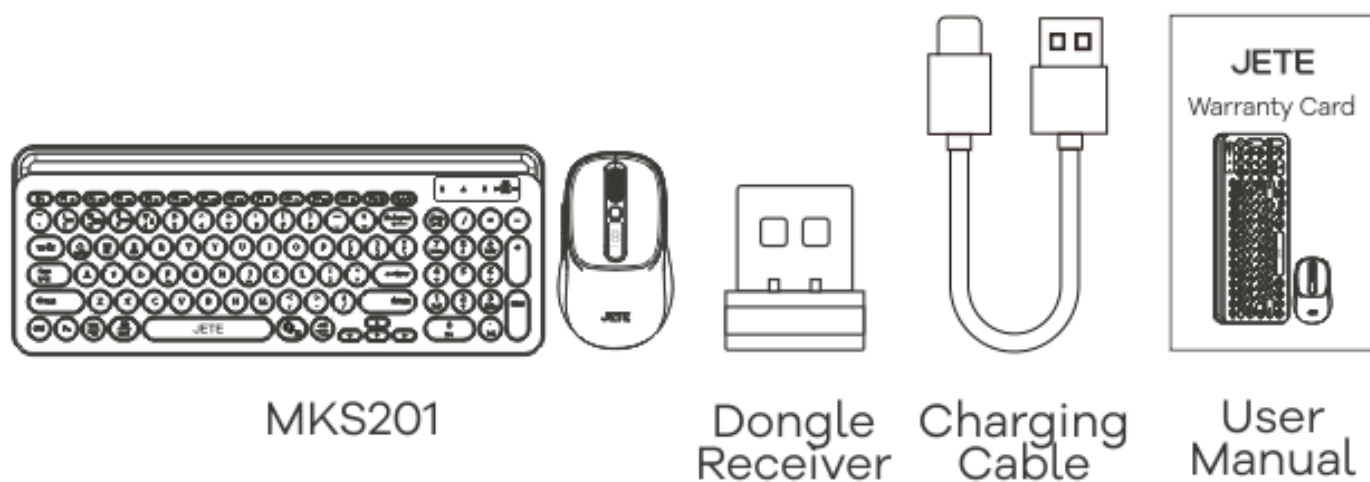

## Description Structure Product :

 
### A. Mouse

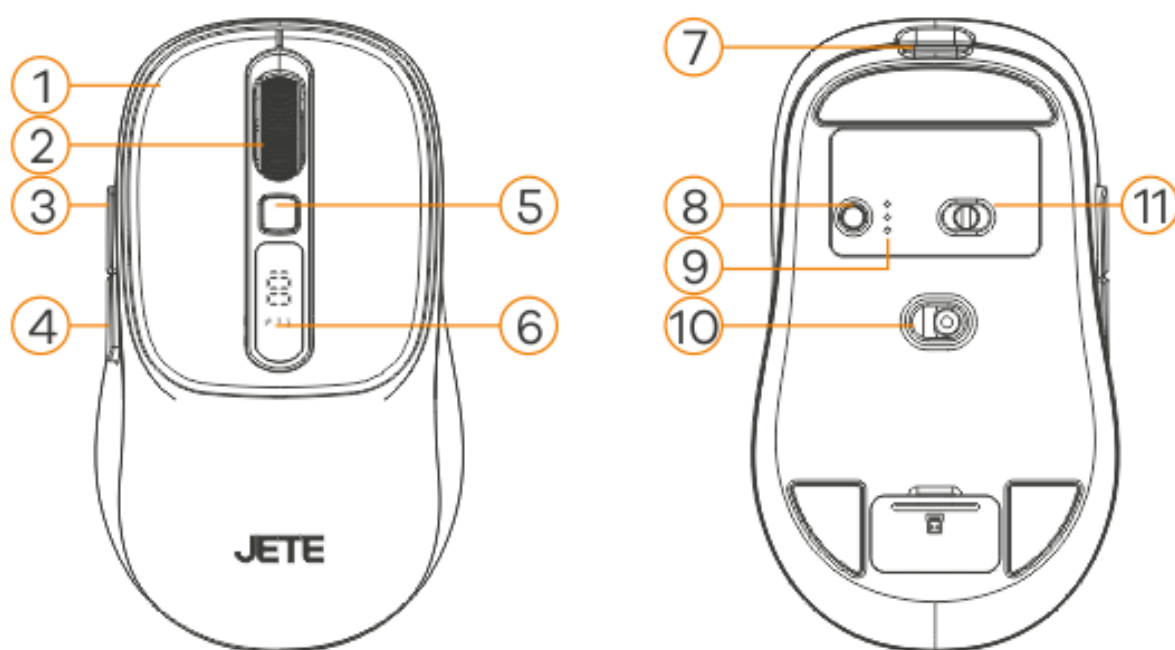

1. Left Button
2. Scroll Wheel
3. Forward Button
4. Backward Button
5. DPI Button
6. LED Display

7. USB-C Port
8. Connection Mode Button
9. Connection Indicator
10. Sensor
11. Power Switch

## B. Keyboard

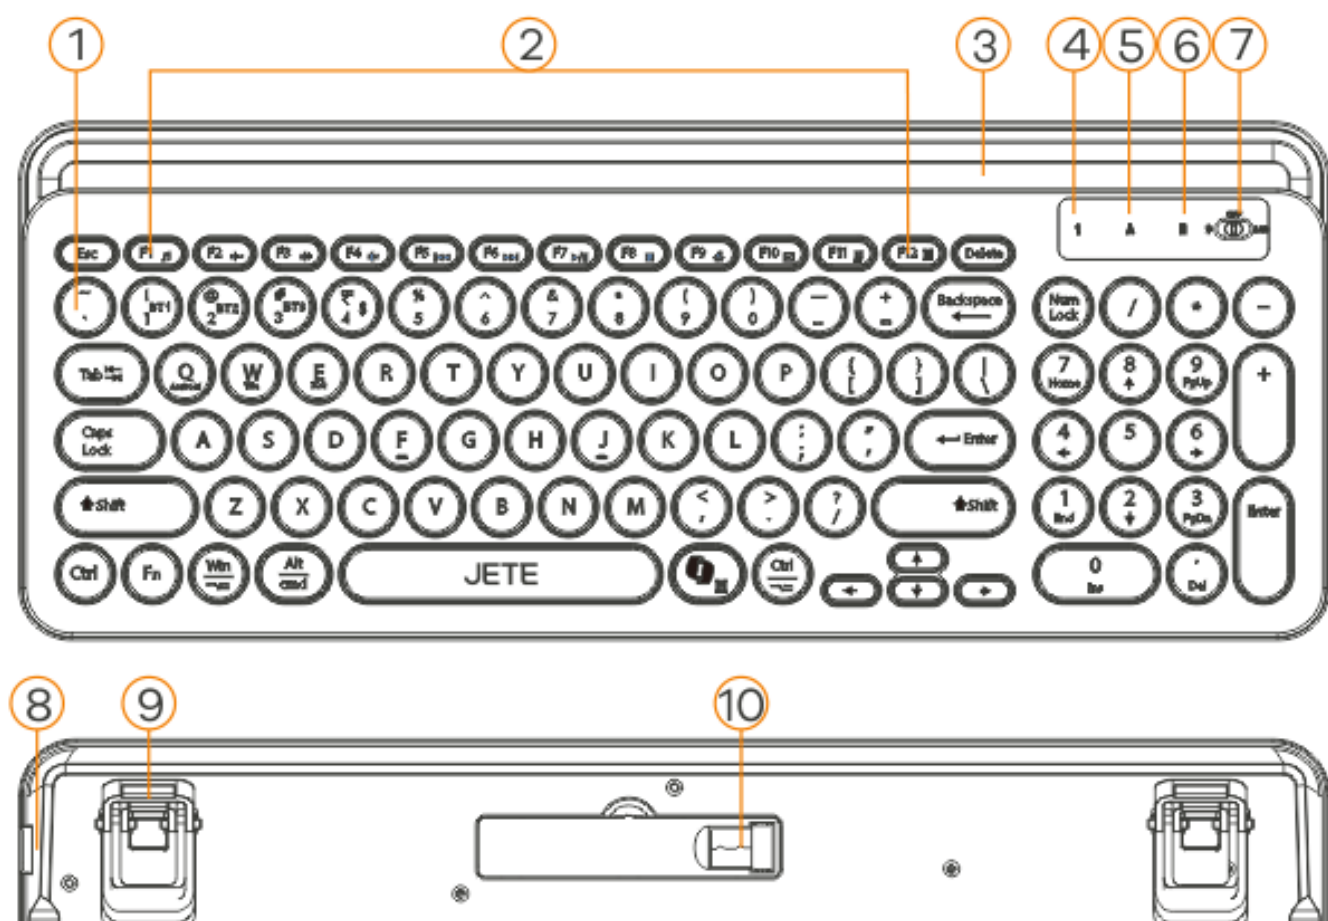 


1. 95 Keys
2. FN Shortcut Key Combination (FN + F1–F12)
3. Holder
4. Num Lock / BT1 Indicator
5. Caps Lock / BT2 Indicator
6. Battery / BT3 Indicator
7. Power Switch
8. USB-C Port
9. 2-Level Height Adjustment
10. Dongle Receiver

### How to Use :
 
#### A. 2.4G Connection Using Dongle

This mouse and keyboard can be connected using the same 2.4G dongle connection.

1. Plug the dongle into a laptop or PC.
2. Turn on the mouse and keyboard, then select 2.4G mode on each device.

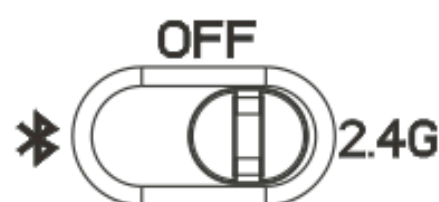

3. The indicators on the mouse and keyboard will blink and then turn off automatically once the connection is successful.



### Notes

  - If the mouse is not connected, repeat the pairing process above.
- If the keyboard is not connected, reset the keyboard's 2.4G connection by turning on the keyboard in 2.4G mode, then press ESC + Q simultaneously. After that, reconnect the dongle receiver and wait until pairing is completed automatically.

### B. Bluetooth Keyboard Connection

The keyboard can connect to 3 devices via Bluetooth:

1. Slide the power switch to the Bluetooth icon position to turn on the keyboard and activate Bluetooth mode.

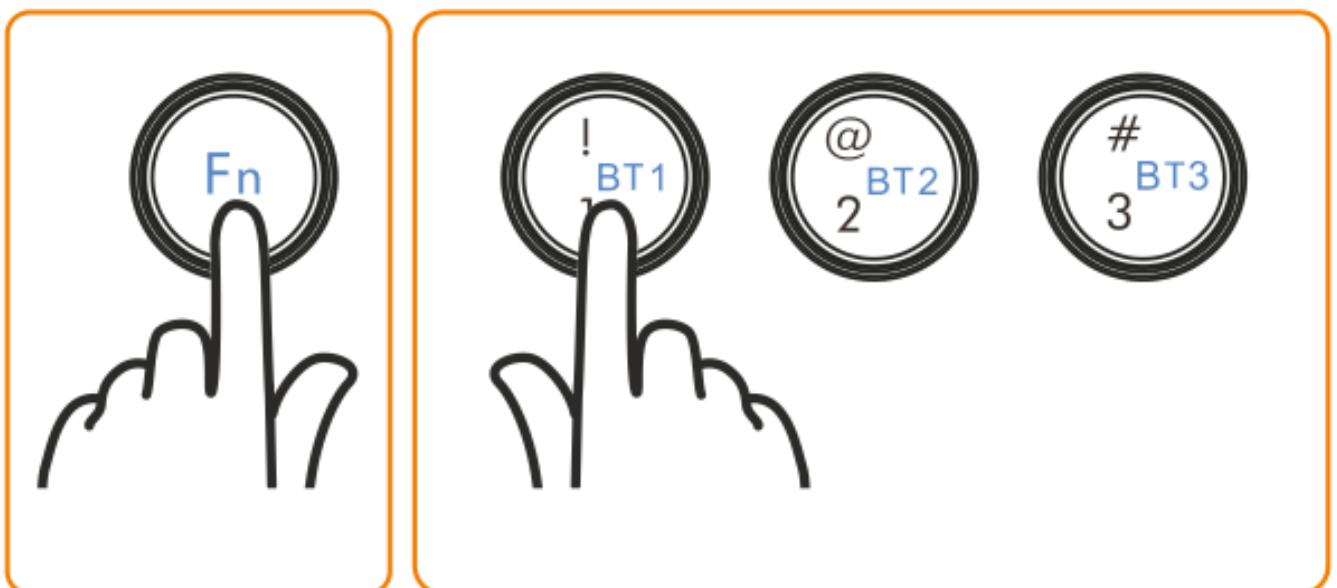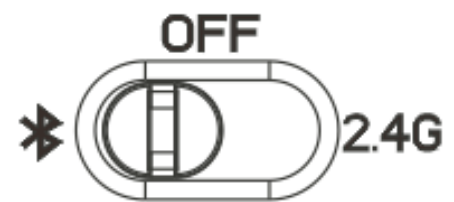

2. Press Fn + 1 / 2 / 3 to switch to Bluetooth mode (BT1 / BT2 / BT3). The indicator will blink.
3. Press and hold Fn + 1 / 2 / 3 for 3 seconds to enter pairing mode; the indicator will blink faster.

4. Enable Bluetooth on your device and search for "JETE-MKS201 BT1", "JETE-MKS201 BT2", or "JETE-MKS201 BT3" in the Bluetooth list, then connect.
5. The indicator will stay on when the connection is successful.

### **C. Mouse Bluetooth Connection**

The mouse can connect to 2 devices via Bluetooth:

1. Slide the power switch to the Bluetooth icon position to turn on the mouse and activate Bluetooth mode.
2. Press and hold the connection mode button for 2 seconds. The Bluetooth indicator will blink, indicating the mouse has entered pairing mode.
3. Enable Bluetooth on your device (laptop, smartphone, or tablet).
4. Select and connect to "JETE-MKS201 BT5" or "JETE-MKS201 BT6".
5. The BT mode will be displayed on the LED display once the connection is successful.



 
### **D. Automatic Sleep Mode**

1. The keyboard and mouse will enter automatic sleep mode after 10 minutes of inactivity.
2. Press any key on the keyboard or click any mouse button to wake them up.

### **E. Switching Operating Systems on the Keyboard**

Use the following function key combinations according to the operating system:

1. Windows: Press and hold Fn + W for 4 seconds.
2. Android: Press and hold Fn + Q for 4 seconds.
3. iOS: Press and hold Fn + E for 4 seconds.

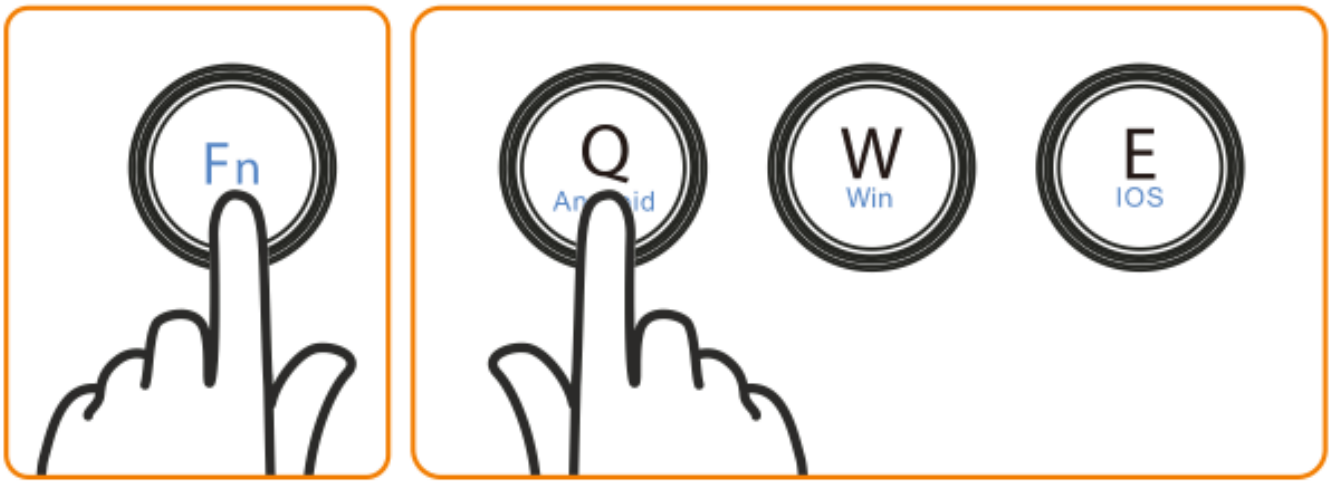

The indicator will blink when the operating system has been successfully switched.

## F. Charging

### 1. Keyboard

The battery indicator will light up during charging and turn off when the battery is fully charged.

### 2. Mouse

During charging, the LED display will show the code "CH". Once fully charged, the LED display will show 100%.

Note : Use only the provided USB-A to USB-C cable for charging.

## Product Specification :

### Keyboard Specification :

Connection	: BT1 + BT2 + BT3 + 2.4 GHz
Number of Keys	: 95 keys
Input Voltage	: 3.7V
Input Current	: 5 mA
Battery Capacity	: 450
Key Lifespan	: Up to 8,000,000 keystrokes
Weight	: 724 g
Product Dimensions	: 37*150*29 mm

### Mouse Specification :

Connection	: BT5 + BT6 + 2.4 GHz
Number of Buttons	: 6 buttons
Input Voltage	: 3.7V
Input Current	: 13 mA
Battery Capacity	: 500 mAh
DPI Range	: 1200 / 1600 / 2400 / 3200
Weight	: 79 g
Product Dimensions	: 108 × 63 × 40 mm

# JETE

**WARRANTY CARD and  
USER MANUAL**

**MOUSE KEYBOARD MKS201**



e-Usermanual

IMPORTIR

**PT. DORAN SUKSES INDONESIA**

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE



081217393609



jete.id



jeteindonesia



jeteindonesia



jeteindonesia

## Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

## How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
  - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
  - The product must still be within the specified warranty period.
  - Warranty card that has been filled out.
  - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
  - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

## Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
  - Disfunction.
  - Audio not detected.
  - Indicator off.
  - Battery damage.
6. This warranty DOES NOT APPLY if:
  - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
  - MODIFIED YOURSELF, SOAKED IN WATER.
  - Supporting accessories such as: cables, adapters, etc.
  - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
  - The product has been repaired by a third party.
  - The data is not filled in completely by the seller and buyer.
  - Damage caused by user error.
  - The product warranty period has expired.

**2 YEARS  
WARRANTY**

**NEW REPLACEMENT  
FOR ANY FAULTS \*T&C**



Contact Us

**JETE WARRANTY POINTS**

