 


JETE X

USER MANUAL

TWS CEG2

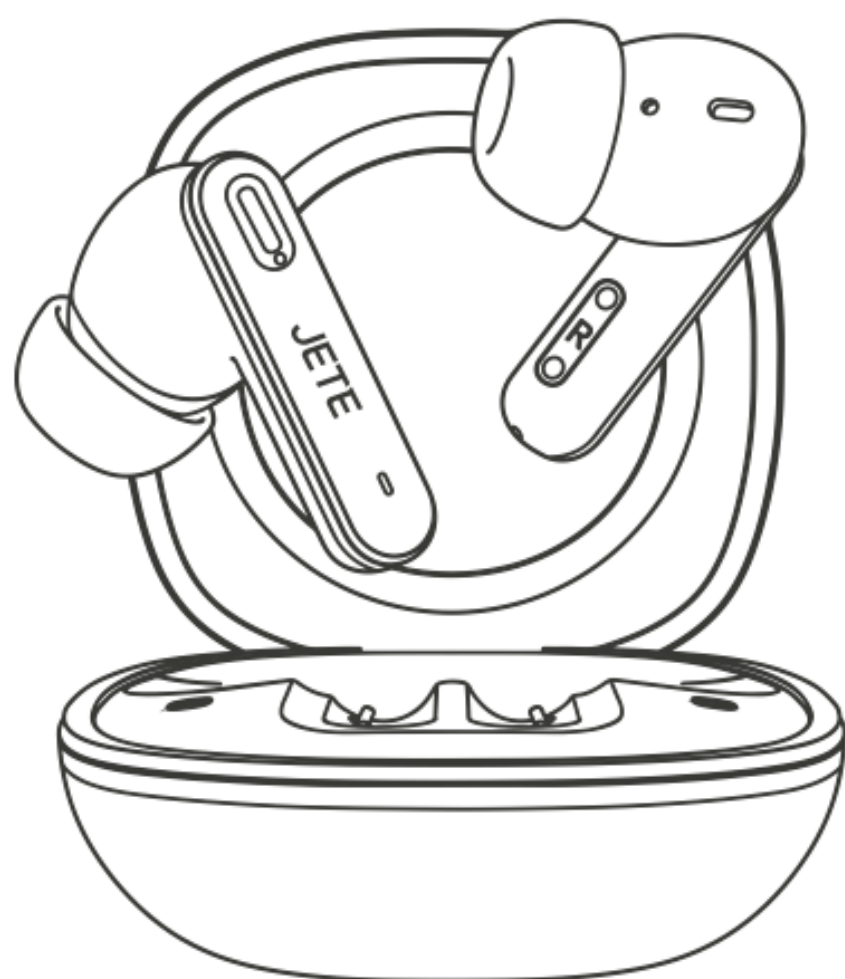 


Please read the instructions carefully
before using the product.

Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, it is expected to read the instructions carefully before using this product.

Content Package :

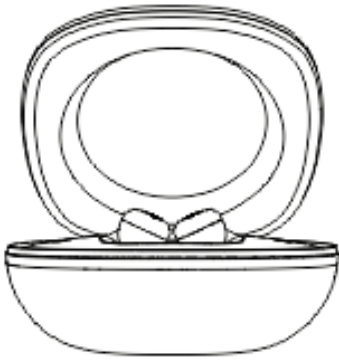

Charging Case



Earbud *2

 


Charging Cable



User Manual

Description Structure Product :

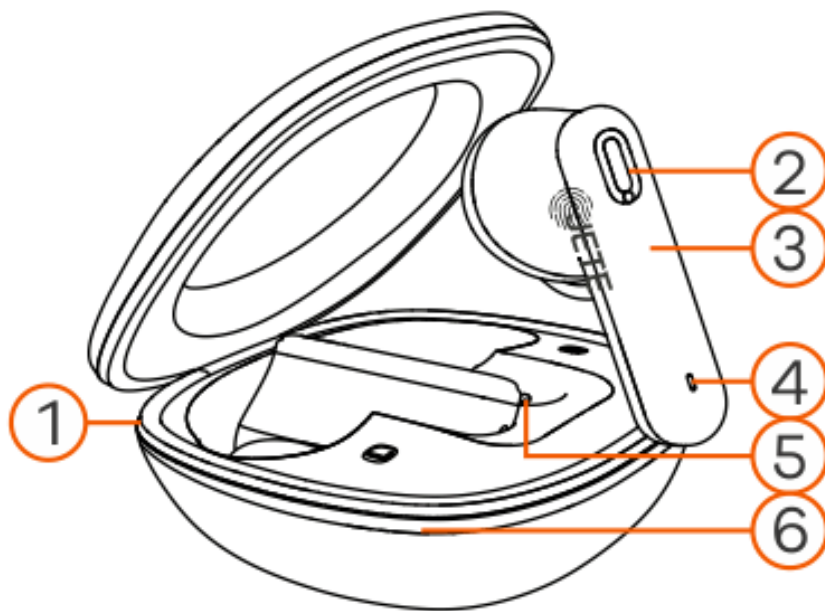

1. USB-C Port
2. Earbud
- Indicator Light
3. MFB
4. Microphone
5. Charging Pins
6. RGB Light

Tips :

Gently insert the earbuds into your ears and adjust the position to fit your ears.



Attention :

Please remove the plastic seals on both ends of the earbuds, and make sure to charge the earbuds in the charging case for approximately 10 minutes to ensure optimal use.

How to Use :

Turning On the Earbuds :

- Remove the earbuds from the charging case to turn them on.
- When the earbuds are outside the charging case, touch and hold either the left or right earbud for 5 seconds.

Turning Off the Earbuds :

- Place the earbuds into the charging case and close the lid; the earbuds will turn off automatically.
- When the earbuds are outside the charging case, touch and hold either the left or right earbud for 5 seconds.

Connecting a Device to the Earbuds :

1. Remove the earbuds from the charging case.
2. Turn on Bluetooth on your device.
3. Search for available devices and select "JETE-CEG2".
4. The earbuds are ready to use.
5. If the earbuds are not paired with a device within 180 seconds after being turned on, they must be restarted.

Notes:

- The earbuds will automatically reconnect to the previously connected device when turned on.
- The connection will be disconnected when you move out of range and will automatically reconnect when you return within range within 3 minutes.

Answering an Incoming Call :

Tap once on either the left or right earbud to answer the call.

Tip : Some devices can only answer calls directly through the device itself. Please follow your device's instructions.

Ending a Call :

Tap once on either the left or right earbud to end the call.

Rejecting an Incoming Call :

Touch and hold either the left or right earbud for 2 seconds to reject the call.

Play / Pause Music :

Tap once on either the left or right earbud to play or pause the music.

Music Control:

- Next track : Tap the right earbud 3 times.
- Previous track : Tap the left earbud 3 times.

Adjusting Volume :

- Increase volume : Touch and hold the left earbud for 2 seconds.
- Decrease volume : Touch and hold the right earbud for 2 seconds.

Using Mono Mode :

- Remove one earbud from the charging case; it will connect to the previously paired device.
- Play music (this mode can also be used for phone calls).

Switching Modes :

Tap the right earbud twice to switch between Game Mode and Music Mode.

Activating Voice Assistant:

Tap the left earbud twice to activate the voice assistant.

Resetting to Factory Settings:

Tap either the left or right earbud 6 times to reset the earbuds.

Charging the Earbuds:

- Earbuds : Place the earbuds into the charging case. The earbud indicator will light up and turn off when fully charged.
- Charging case : The charging case indicator will blink during charging and remain solid once charging is complete.

Product Specification :

Bluetooth	: V6.0
Impedance	: 32Ω
Earbud Battery Capacity	: 40mAh
Case Battery Capacity	: 400mAh
Playback Time	: 30 hours
Call Time	: 20 hours
Charging Time	: 2 hours
Standby Time	: More than 300 hours
Audio Codec	: A2DP, SBC, and AAC
Sensitivity	: -103dB ± dB
Microphone Sensitivity	: -42dB
Frequency Range	: 1Hz–20kHz
Input Voltage	: DC 5V / 300mA
Wireless Operating Range	: 10m (No Obstacle)

JETEX

**WARRANTY CARD and
USER MANUAL**

TWS CEG2



e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA

Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE



081217393609



jete.id



[jeteindonesia](https://www.instagram.com/jeteindonesia)



[jeteindonesia](https://www.facebook.com/jeteindonesia)



[jeteindonesia](https://www.twitter.com/jeteindonesia)

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:
 - A purchase receipt that clearly states the name of the outlet and the date of the transaction.
 - The product must still be within the specified warranty period.
 - Warranty card that has been filled out.
 - Box / Packing Product.
5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely:
 - BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.
7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:
 - Disfunction.
 - Audio not detected.
 - Indicator off.
 - Battery damage.
6. This warranty DOES NOT APPLY if:
 - PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
 - MODIFIED YOURSELF, SOAKED IN WATER.
 - Supporting accessories such as: cables, adapters, etc.
 - Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
 - The product has been repaired by a third party.
 - The data is not filled in completely by the seller and buyer.
 - Damage caused by user error.
 - The product warranty period has expired.

**2 YEARS
WARRANTY**

NEW REPLACEMENT
FOR ANY FAULTS *T&C



Contact Us

JETE WARRANTY POINTS

